



## **SIERRA VIDEO**

---

Pro XL Series 16 Routing Switchers

Models: 1608V5S, 1616V5S, 1608V5, 1616V5, 1608V4S,  
1616V4S, 1608V4, 1616V4, 1608V3S, 1616V3S, 1608V3,  
1616V3, 1608V2S, 1616V2S, 1608V2, 1616V2

# User's Manual



**SIERRAVIDEO**



**PRO SERIES XL SERIES 16 ROUTING SWITCHERS**

# User's Manual

---

© Sierra Video  
P.O. Box 2462 Grass Valley, CA 95945  
Tel: (530) 478-1000  
Fax: (530) 478-1105  
Email: [info@sierravideo.com](mailto:info@sierravideo.com)

Version 7.0  
Publication Date: September 2014

The information contained in this manual is subject to change by Sierra Video



# Table of Contents



Introduction	1	Operation	25
Before You Begin	1	Introduction	25
Warnings & Safety Regulations	2	Local Control Panel Operation	25
Cautions (continued)	3	Switcher Operation	26
FCC Notice	3	Button and Display Definitions	26
Warning	3	Menu	26
CE Notice	4	Switching the Router	29
Warning	4	Status	30
ICAN Class A Digital Equipment	4	Control via 9-pin Connectors	31
Power Supply Cords	6	Control via Ethernet	31
North American Power Supply Cords	6	Host Mode	32
International Power Supply Cords	6	Terminal Mode	32
EMC Regulatory Notices	6	Power Up	32
Delivery Damage Inspection	7	Communication Protocol	33
Pro Series 16 Overview	9	Introduction	33
Introduction	9	Generic Protocol	34
Model Suffix Designations	10	Commonly Used Switching Commands	57
Pro Series 16 System Components	10	Troubleshooting	59
Model 1616V5S	11	Introduction	59
Factors Affecting Quality of Results	12	Power and Indicators	59
Installation	13	Video Signal	60
Introduction	13	Audio Signal	61
Rack Mounting	13	Control	61
Dimensions	13	Switching Malfunctions	62
Connecting To Video Devices	14	Software Upgrades	62
Connecting To Audio Devices	14	Specifications	63
Connecting Peripherals	16	Warranty	65
J1 Connector	16		
Sync Input	17		
AC Power Connections	17		
Control Processor Dip Switch Settings	17		
Ethernet Setup	18		
Ethernet Control	20		
Names	22		
Room Grouping	22		
Matrix Mapping	22		
Sync Rate Reporting	23		



# Introduction

## Before You Begin

There are several terms and acronyms that you should become familiar with before reading this manual. They are shown below.

<b>Term/Acronym</b>	<b>Definition</b>
Crosspoint	The electronic switch that assigns one of the inputs to an output.
Destination	The output of a routing switcher connected to a device that receives signals from the output of the switcher.
Output	Connects the signal to the destination device.
Source	The signal that is connected to the input of the routing switcher.
Input	Connected to the source that provides the signal to the switcher.
Matrix	An array of the switch modules that connects an input to an output.
Protocol	The command structure used to affect a switch or multiple switches on the routing switcher or to control other functions.
Routing Switcher	Consists of one or more crosspoint modules that switch together, or sometimes independently, to connect the desired signals through the switcher.
Serial Port	The 9-pin RS232 connector that allow you to control the switcher using a standard personal computer or other external device.

# Warnings & Safety Regulations

The information in the following section provides important warnings and safety guidelines for both the operator and service personnel. Specific warnings and cautions may be found throughout this manual. Please read and follow the important safety precautions noting especially those instructions relating to risk of fire, electrical shock and injury to persons.

Any instructions in this manual that require opening the equipment cover or enclosure are intended for use by qualified service personnel only. To reduce the risk of electrical shock, do not perform any servicing other than what is contained in the operating instructions unless you are qualified.

## Warnings

- Heed all warnings on the unit and in the operating instructions.
- Disconnect AC power before installing any options.
- Do not use this product in or near water.
- This product is grounded through the grounding conductor of the power cord. To avoid electrical shock, plug the power cord into a properly wired receptacle before connecting inputs or outputs.
- Route power cords and other cables so that they are not likely to be damaged, or create a hazard.
- Dangerous voltages exist at several points in this product. To avoid personal injury, do not touch unsafe connections and components when the power is on.
- To avoid fire hazard, use only the specified type, correct voltage, and current rating of fuse. Always refer fuse replacement to qualified service personnel.
- Have qualified personnel perform safety checks after any completed service.
- To reduce risk of electrical shock, be certain to plug each power supply cord into a separate branch circuit employing a separate service ground.
- If equipped with redundant power, this unit has two power cords. To reduce the risk of electrical shock, disconnect both power cords before servicing.
- Operate only with covers and enclosure panels in place – Do Not operate this product when covers or enclosure panels are removed.
- This is an FCC class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take necessary measures.

## Cautions

- Use the proper AC voltage to supply power to the switcher. When installing equipment, do not attach the power cord to building surfaces.
- To prevent damage to equipment when replacing fuses, locate and correct trouble that caused the fuse to blow before applying power.

## Cautions (continued)

- Use only the recommended interconnect cables to connect the switcher to other frames.
- Follow static precautions at all times when handling the equipment.
- Power this product only as described in the installation section of this manual.
- Leave the side, top, and bottom of the frame clear for air convection cooling and to allow room for cabling. Slot and openings in the frame are provided for ventilation and should not be blocked.
- Only an authorized Sierra Video technician should service the switchers. Any user who makes changes or modifications to the unit without the expressed approval of Sierra Video will void the warranty.
- If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than the room ambient temperature. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (TMRA).
- Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.
- Use a shielded data cable connection between the parallel data ports and peripherals of this equipment.
- Other connections between peripherals of this equipment may be made with low voltage non-shielded computer data cables.
- Network connections may consist of non-shielded CAT 5 cable.
- Do not cover chassis ventilation slots or block enclosure openings.

### FCC Notice

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at the expense of the user.

The user may find the following publication prepared by the Federal Communications Commission helpful:

"How to Identify and Resolve Radio-TV Interference Problems" (Stock number 004-000-00345-4).

Available exclusively from the Superintendent of Documents, Government Printing Office, Washington, DC 20402 (telephone 202 512-1800).

### Warning

Changes or modifications not expressly approved by the party responsible for compliance to Part 15 of the FCC Rules could void the user's authority to operate the equipment.

## CE Notice

### **INFORMATION FOR THE USER**

This equipment has been tested and found to comply with the limits for Class A or Class 1 digital device, pursuant to EN 55022 Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at the expense of the user.

The user may find the following publication prepared by the Federal Communications Commission helpful:

“How to Identify and Resolve Radio-TV Interference Problems” (Stock number 004-000-00345-4). Available exclusively from the Superintendent of Documents, Government Printing Office, Washington, DC 20402 (telephone 202 512-1800).

## Warning

Changes or modifications not expressly approved by the party responsible for compliance to EN 55022 Rules could void the user's authority to operate the equipment.

## ICAN Class A Digital Equipment

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Pulver Laboratories Inc. and Sierra Video Systems Inc. hereby certify that the Series 8 and Series 12 Sierra Pro router is in compliance with VFG 523/1969, DIN 57871 / VDE 0871 / 09.84, and DIN 5785 Part 1 A2 / 10.90 (product standards) and is RFI suppressed.

The marketing and sale of this equipment in Germany has been reported to the German Postal service. They have also been given the right to retest this equipment to verify compliance with product regulations.

Compliance with applicable regulations depends on the use of shielded cables. The user is responsible for procuring the appropriate cables.

This equipment has been tested concerning compliance with the relevant RFI protection requirements both individually and on a system level (to simulate normal operation conditions). However, it is possible that these RFI requirements are not met under certain unfavorable conditions in other installations. The user is responsible for compliance of his particular installation.

**Pulver Laboratories Inc.**

Testing and Certification Laboratories

**Sierra Video Systems**

Name of Manufacturer or Importer

Bescheinigung des Pulver Laboratories Inc. und Sierra Video Systems hiermit wird bescheinigt, dass die Series 8 and Series 12 Sierra Pro router in Übereinstimmung mit den Bestimmungen der VFG 523/1969, DIN 57871 / VDE 0871 / 09.84, und DIN 57875 Part 1 A2 / 10.90 (Amtsblattvertugung) funk-entstört ist.

Der deutschen Bundespost wurde das Inverkehrbringen dieses Geräts angezeigt und die Berechtigungen zur Überprüfung der Serie auf Einhaltung der Bestimmungen eingeräumt.

Einhaltung mit betreffenden Bestimmungen kommt darauf an, dass geschirmte Ausführungen gebraucht warden. Für die Beschaffung richtiger Ausführungen ist der Betreiber Verantwortlich.

Dieses Gerät wurde sowohl einzeln als auch in einer Anlage, die einen normalen Anwendungsfall nachbildet, auf die Einhaltung der Funk-entstörbestimmungen unter Ungünstigen Umständen bei anderen Gerätekombinationen nicht Eingehalten warden. Der Betreiber ist für die Einhaltung der funk-eutstörungsbestimmungen seiner gesamten Anlage verantwortlich, in der dieses Gerät betrieben wird.

**Pulver Laboratories Inc.**

Testing and Certification Laboratories

**Sierra Video Systems**

Name des Herstellers / Importeurs

## Power Supply Cords

Use only power cord(s) supplied with the unit.

If power cord(s) were not supplied with the unit, select as follows:

- For units installed in the USA and Canada: select a flexible, three-conductor power cord that is UL listed and CSA certified, with individual conductor wire size of #18 AWG, and a maximum length of 4.5 meters. The power cord terminations should be NEMA Type 5-15P (three-prong earthing) at one end and IEC appliance inlet coupler at the other end. Any of the following types of power cords are acceptable; SV, SVE, SVO, SVT, SVTO, SVTOO, S, SE, SO, SOO, ST, STO, STOO, SJ, SJE, SJO, SJOO, SJT, SJTOO, SP-3, G, W.
- For units installed in all other countries; select only a flexible, three-conductor power cord, approved by the cognizant safety organization of your country. The power cord must be Type HAR (Harmonized), with individual conductor wire size of 0.75 mm<sup>2</sup>. The power cord terminations should be a suitably rated earthing-type plug at one end and IEC appliance inlet coupler at the other end. Both of the power cord terminations must carry the certification label (mark) of the cognizant safety organization of your country.
- A non-shielded power cord may be used to connect AC power to every component and peripheral of the system.
- Connect an external 16 AWG wire from earth ground to the chassis of the system as designated by the earth ground symbol.

### North American Power Supply Cords

This equipment is supplied with North American power cords with molded grounded plug (NEMA-15P) at one end and molded grounding connector (IEC 320-C13) at the other end. Conductors are CEE color coded, light blue(neutral), brown(line), and green/yellow(ground). Operation of the equipment at voltages exceeding 130VAC will require power supply cords that comply with NEMA configurations.

### International Power Supply Cords

If shipped outside North America, this equipment is supplied with molded ground connector (IEC 320-C13) at one end and stripped connectors (50/5mm) at the other end. Connections are CEE color coded, light blue (neutral), brown(line), and green/yellow(ground). Other IEC 320-C13 type power cords can be used if they comply with safety regulations of the country in which they are installed.

## EMC Regulatory Notices

Federal Communications Commission (FCC) Part 15 Information: This device complies with Part 15 of the FCC standard rules. Operation is subject to the following conditions:

This device may not cause harmful interference

This device must accept any interference received including interference that may cause undesirable operations.

## Delivery Damage Inspection

Carefully inspect the frame and exterior components to be sure that there has been no shipping damage. Make sure all modules are seated correctly and have not detached during shipment. Also, make sure the input buffer modules on the rear panel are secure.



# Pro Series 16 Overview

## Introduction

The Sierra Pro XL series component analog routing switchers offers high-bandwidth 3, 4, or 5 channel (RGB + HV) and stereo audio (S) matrix routing capability in a series of compact frames. The Pro series was designed specifically for presentation environments such as corporate boardrooms, live staging events, churches, and universities.

This manual covers only the Pro Series 16 routing switchers. These robust routers offer RGB/HV and Stereo Audio in the same, compact frame. Moreover, these durable frames can be populated from one to five video and pulse sync channels. They have been engineered for high bandwidth with very low crosstalk. Many other features include audio gain adjustment for Inputs and Outputs through standard front control panels or via a control serial port and optional redundancy. The series 16 system accommodates balanced or un-balanced audio, AFV, or breakaway split routing allowing RGB muting for seamless performance to projectors and displays. This family of routing switchers is optimized for multiple signal type control within the same frame. Composite, S-video, YC, YUV, RGBHV, analog HD, and audio are easily control with one small Sierra Pro frame. Sierra Pro's 450MHz bandwidth supports most high-resolution sources.



The Pro Series 16 models also feature a user-friendly, color-coded (RGB) rear panel layout for easy installation, and their own unique motherboard configuration options. Frames also come with standard front local control panel, serial control via an RS-232/422 serial interface, and an RJ-45 Ethernet port, with up to five simultaneous users that are supported by SVS software and by all major third-party control systems.

## Model Suffix Designations

Model Suffix Designations	
V	Analog video (300MHz bandwidth)
1616,1608	Matrix size
#	Number of video and sync channels (analog, YC, RGB, RGB+HV etc.)
S	Stereo audio
R	Redundant Power Supplies


## Pro Series 16 System Components

This User's Manual provides installation and operation information for the Pro Series 16 Routing Switchers. Front and Rear panel illustrations are provided in the following subsections for each switcher model. Take time to familiarize yourself with the location of your switcher model features


Component	Pro Series 16 Switchers	
	▪ 1616V5S	▪ 1608V5S
Video Frame	<ul style="list-style-type: none"> <li>▪ <i>Video and Audio (contained in one frame)</i></li> <li>▪ Power Supply(ies)</li> <li>▪ Video Motherboard</li> <li>▪ Audio Motherboard</li> <li>▪ Local Control Panel</li> </ul>	<ul style="list-style-type: none"> <li>▪ <i>Video and Audio (contained in one frame)</i></li> <li>▪ Power Supply(ies)</li> <li>▪ Video Motherboard</li> <li>▪ Audio Motherboard</li> <li>▪ Local Control Panel</li> </ul>
Accessory Kit	<ul style="list-style-type: none"> <li>▪ User's Manual</li> <li>▪ 5-pin Audio Connectors</li> <li>▪ Fuses</li> <li>▪ Power Cord</li> <li>▪ Software Disk</li> </ul>	<ul style="list-style-type: none"> <li>▪ User's Manual</li> <li>▪ 5-pin Audio Connectors</li> <li>▪ Fuses</li> <li>▪ Power Cord</li> <li>▪ Software Disk</li> </ul>

# Model 1616V5S

Frame Front Panel

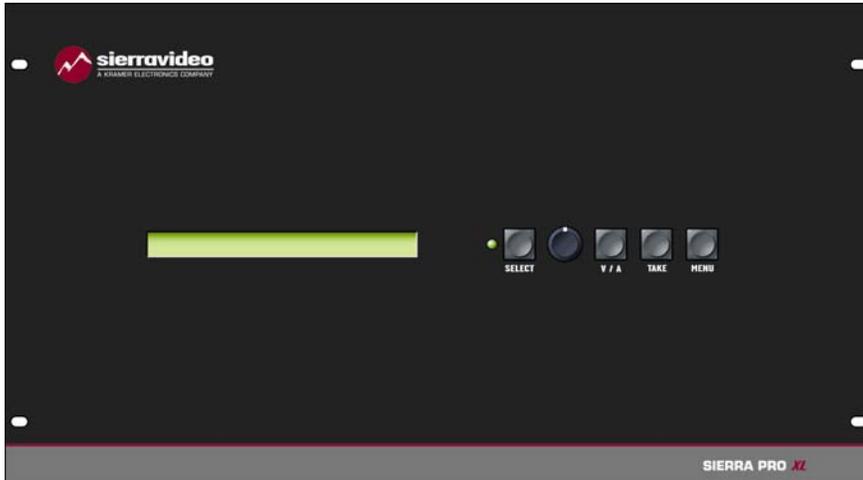

Frame Back Panel

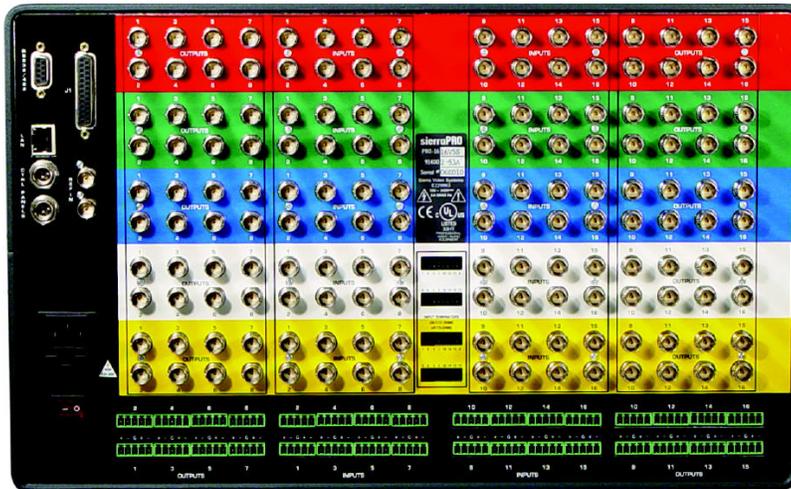

**Note**

The Sierra PRO models shown here and in the subsequent sections are fully populated video and audio matrices. In some cases, these frames may be configured with fewer video channels and perhaps no audio i.e. 1608V3. Sierra PRO models also offer redundant power supplies. Consult the rear panel serial number and model number to verify your order and product. The system you receive is customized for the size & type requested at time of purchase from Sierra Video.

## Factors Affecting Quality of Results

There are many factors affecting the quality of results when signals are transmitted from a source to a destination.

- Signal cables — Use only the best quality cables to avoid interference and degraded signal quality and elevated noise levels.
- Sockets and connectors of the sources and destinations — Use only the highest quality, since "zero ohm" connection resistance is the target. Connectors should also match the required impedance (75 ohm in video) to minimize return loss.
- Amplifying circuitry — Must have quality performance when the desired end result is high linearity, low distortion, and low noise.
- Distance between sources and destinations — Plays a major role in the final result. For long distances (over 15 meters) between sources and destinations, special measures should be taken to avoid high frequency cable losses. These measures include using higher quality cables and/or adding line cable equalizing amplifiers.
- Interference from neighboring electrical appliances — These can have an adverse affect on signal quality. Balanced audio lines are less prone to interference, but unbalanced audio should be installed away from any main power lines, electric motors, transmitters, etc. even when the cables are shielded.

---

### **CAUTION!**

---

*Only an authorized Sierra Video technician can service the switchers. Any user who makes changes or modifications to the unit without the expressed approval of the manufacturer will void the warranty*

*Use the proper AC voltage to supply power to the switcher.*

*Use only the recommended interconnect cables to connect the switcher to other frames.*

# Installation

## Introduction

Installation procedures are similar for all frames covered under this manual. Exceptions, if any, have been noted in each of the following paragraphs.

## Rack Mounting

Carefully inspect the frame to ensure that there has been no shipping damage. Make sure all shipping material is removed from the router frame.

Each of the routing switchers described in this manual can be rack mounted in a standard 19" (RU) EIA rack assembly and includes rack "ears" at the ends of the front of the frames. None of the switcher models require spacing above or below the unit for ventilation. If ample space exists, a 1RU spacing gap is recommended.

To rack mount any of the routing switchers, simply place the unit's rack ears against the rack rails of the rack, and insert proper rack screws through each of the holes in the rack ears. Always rack mount the routing switcher prior to plugging the unit into a power receptacle or attaching any cables.

---

### **CAUTION!**

*The operating temperature range of the SVS 16 series router is 0 to 40 °C. Do not exceed the maximum (40 °C) or minimum (0 °C) operating temperature.*

If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than the room ambient temperature. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (TMRA).

Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.

## Dimensions


The Pro Series 16 frames are 6 rack units in height, 19" wide, and 18.5" in depth.

## Connecting To Video Devices

Video sources and output devices (such as monitors, or recorders) may be connected to the routing switchers through the BNC type connectors located on the back of the unit. Keep in mind that the output signal format will be that of the input signal format.


All signal connections that use more than one cable interconnecting between devices should be of equal timing length (example: cables between a camera and the switcher should have the same time delay).

The rear panel of the frame is laid out in the most logical fashion possible. The individual channels are color-coded. The white and yellow conventions, used for the H and V sync channels, are arbitrary and these two channels are interchangeable. Each channel can have only "H" or "V" signals – not both. All inputs are factory set for 510 ohm termination. The sync ("H" "V") input terminations can be changed to 75 ohm by changing the dip switches located on the rear panel of the router. The upper row of switches applies to the "white" row of inputs with the lower row of switches applying to the "yellow" row. Unused outputs do not need to be terminated.

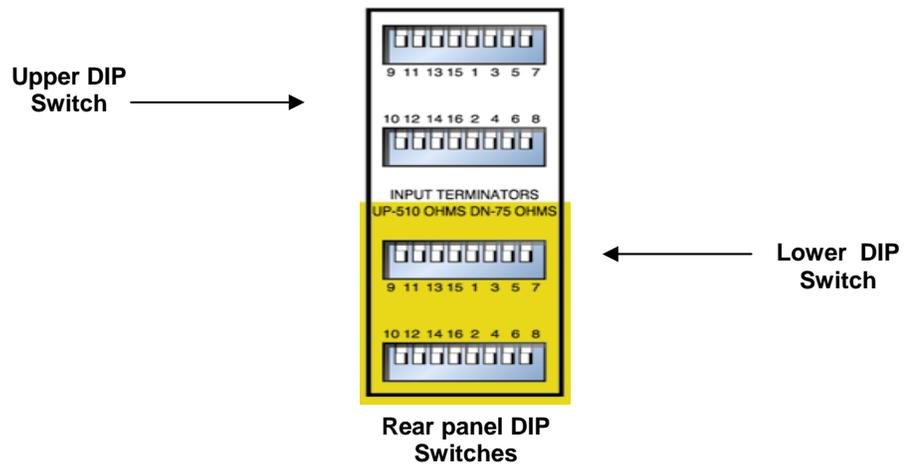

## Connecting To Audio Devices

Audio sources and output devices (such as amplifiers or recorders) are connected to the switchers through the terminal block connectors located at, and marked, on the rear of the switcher.

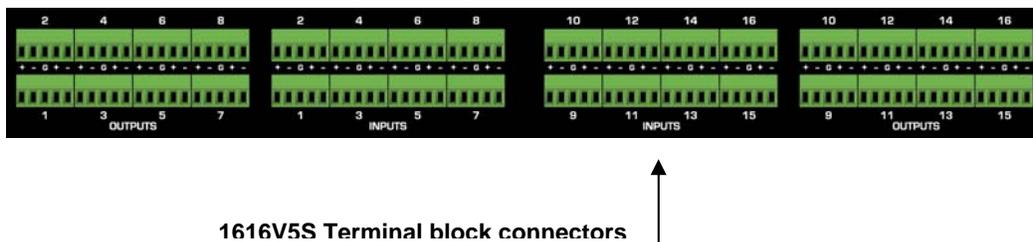


## Balanced/Unbalanced Audio Connections

All audio sources from the routing switcher are balanced audio. Connect the balanced audio to the balanced input of your destination device(s).

If this is a 2-channel system used for stereo audio, ensure that you keep the same phase relationship. Connect the positive designated pin to the same relative pin on the destination device of both channels.

To connect an unbalanced device to the switcher, first place a jumper between the negative (-) and the ground on the switcher (jumper not included.) Then connect the device positive (+) to positive (+) and shield to ground as shown in the graphic below.

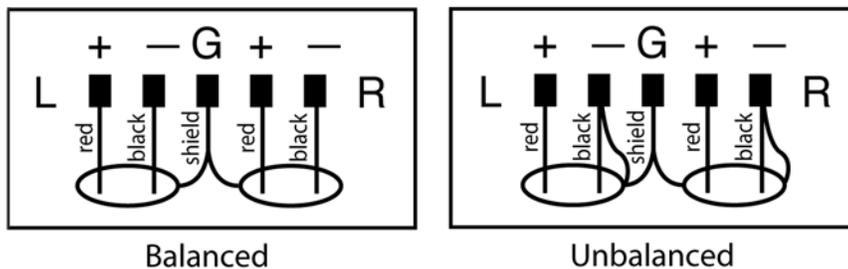

For unbalanced sources, connect the unbalanced source to one side of the balanced input and ground. The other input does not have to be grounded. Note, always use the same side of the balanced input for stereo.

## Audio Adjustments

Unity gain is set at the factory. Audio gain is adjusted via a menu option. See “Menu Items” in the Operation section Chapter 3. Audio gains may also be adjusted via the 9 pin serial port using the TyLinx Pro Software program (refer to the TyLinx Pro manual), or using Host protocol (see Communication protocol Ch. 4).


## Audio Follow Video and Breakaway Audio Configurations

Component video channel (YC, RGB etc.) signals are switched by separate crosspoint modules. All crosspoint modules will be switched at the same time. Audio can be switched following the video or separately after the breakaway.

## Connecting Peripherals

Control panels, sync inputs, and power are all connected to the rear of the frame. The peripherals area may vary depending on the model size and type.

SVS Pro series 16 routing switchers offer redundant power supplies but must be specified prior to order.

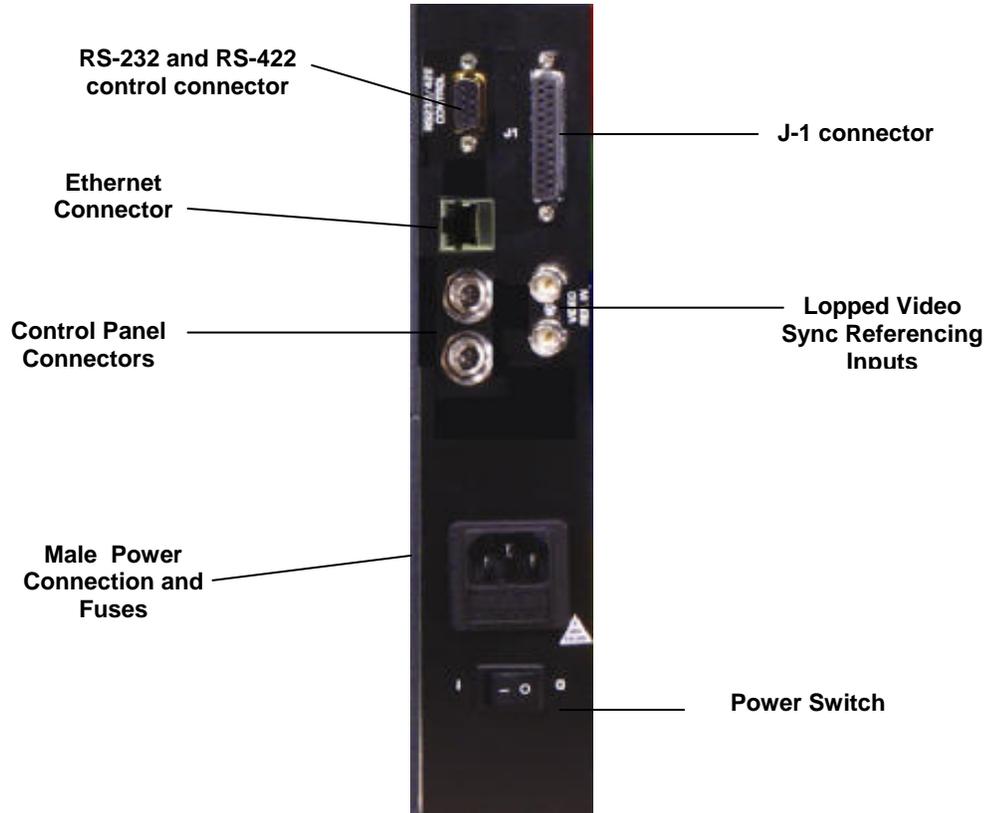

---

**Note:**

Rear Panels vary according to model. See back panel for precise detail.

### J1 Connector

The connector labeled J1 on the back panel is used to connect other routing devices to the router. Contact the factory for correct configuration before connecting other devices.

## Sync Input

There are two BNC connectors labeled "VID. REF. IN". This is a "looping" input for sync referencing. Connect either composite sync or video with sync to either BNC. If desired, use the second BNC to loop the signal to another device. If the loop is not used, terminate the second BNC with 75 ohms. If no sync is available, the routing switcher will switch at a random point rather than during the vertical interval of the reference signal.


## AC Power Connections

Pro series 16 routing switchers offer redundant power supplies but must be specified prior to order. The power supplies are universal AC inputs. Voltage selection is not necessary because the power supply senses the correct AC input automatically.

The Sierra Pro models use a power switch located on the rear of the frame. Turn on power to the frame **ONLY AFTER** all video and control connections have been completed as described below.

## Control Processor Dip Switch Settings

Your switcher has been configured at the factory for the settings you are most likely to need. However, if you want to configure the switcher differently, you can do so by setting the switches located on the processor board (behind the front panel). Dip Switches and their action are given in the table that follows. Dip Switches are shown in their factory default settings.

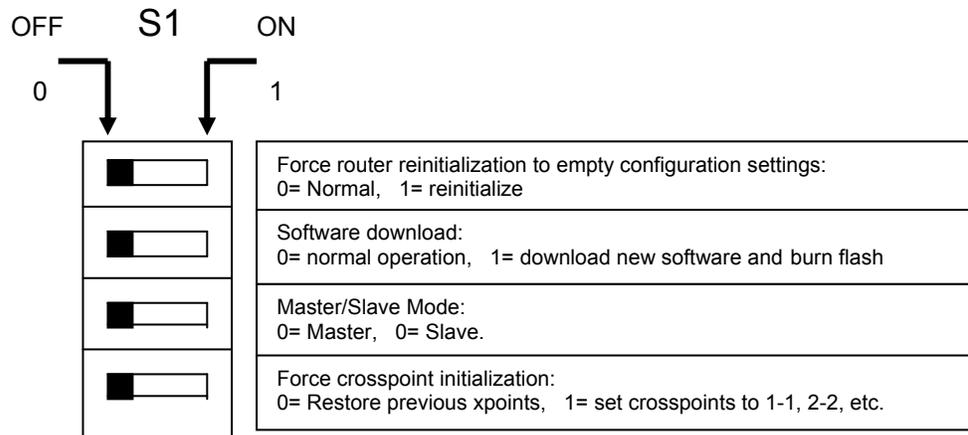


---

**Note:**

*Changing any Dip Switch causes an automatic reset after a few seconds.*

# Ethernet Setup

Default IP settings;

IP Address- 192.168.1.200

Subnet mask- 255.255.255.0


Gateway IP Address- 0.0.0.0

Telnet Port- 10001

The IP port accepts all Sierra Video HOST protocol commands.

To configure the IP port the router must first be connected to your computer. This can either be done using a crossover cable to connect your PC to the routing switcher directly, or the routing switcher may be added to your existing network. The routing switcher defaults to an IP address of 192.168.1.200 which will not conflict with other devices in most system. If there is an address conflict, a crossover cable must be used to configure the routing switchers Ethernet port.

Once your PC and the routing switcher are on the same Ethernet network, open your internet browser and type in the default address of the routing switcher in the address line of the internet browser.

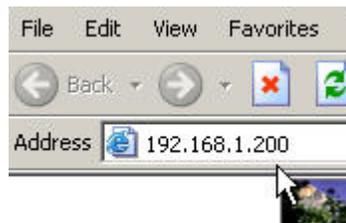

This will open a web page stored in the SVS router. Router information is displayed on this page.



To setup IP address parameters, select “Setup”.

**Network Configuration**

**Warning:** Any improper settings may prevent the ethernet port from operating correctly. Any changes you make will not become active until you cycle the power on the router.

Control Status: Information Display Updated.

Device IP Address: 192 . 168 . 6 . 37 (e.g. 192.168.1.200)

Subnet Mask: 255 . 255 . 255 . 0 (e.g. 255.255.255.0)

Gateway IP Address: 192 . 168 . 6 . 36 (e.g. 192.168.1.1)

Ethernet Timeout Enabled:

Device Name: Lassen 3232VS (e.g. Lassen 3232VS)

Company Name: Sierra Video (e.g. Sierra Video)

Location Name: Edit Suite 3 (e.g. Edit Suite 3)

Sierra Server Version Number:

Control Status Update Rate: 10 (Range 10 to 600 Seconds)

Update Configuration

Enter the new IP address information. Device Name, Company Name, and Location Names are user definable. Click on “Update Configuration” to make changes.

**The Ethernet connection only supports the following Subnet Mask addresses;**

- **255.255.255.0**
- **255.255.0.0**
- **255.0.0.0**

After making any changes to this screen the router has to be reset (power cycled) in order for changes to take effect.


---

**Note:**

The router Must be reset after making changes to the IP address.

## Ethernet Control


There are two screens for switching the router. Selecting “I/O” displays the following screen;

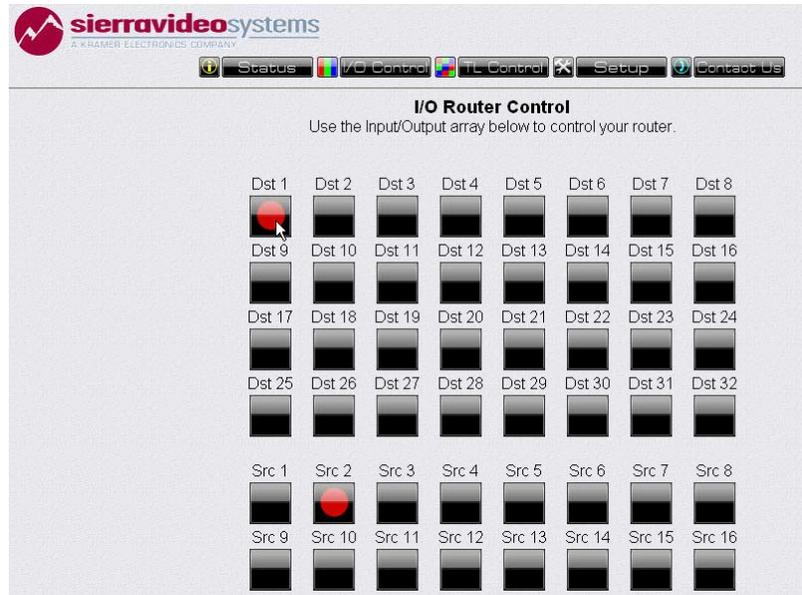

To switch the router, select (left mouse click) on a destination, the button will turn red. The current status will be indicated by the current source button will turn red.

Status can also be checked by hovering the mouse pointer over a destination. The destination button will turn blue and the corresponding source that is connected to that destination will also turn blue.

Another method of switching is by selecting “TL Control”.

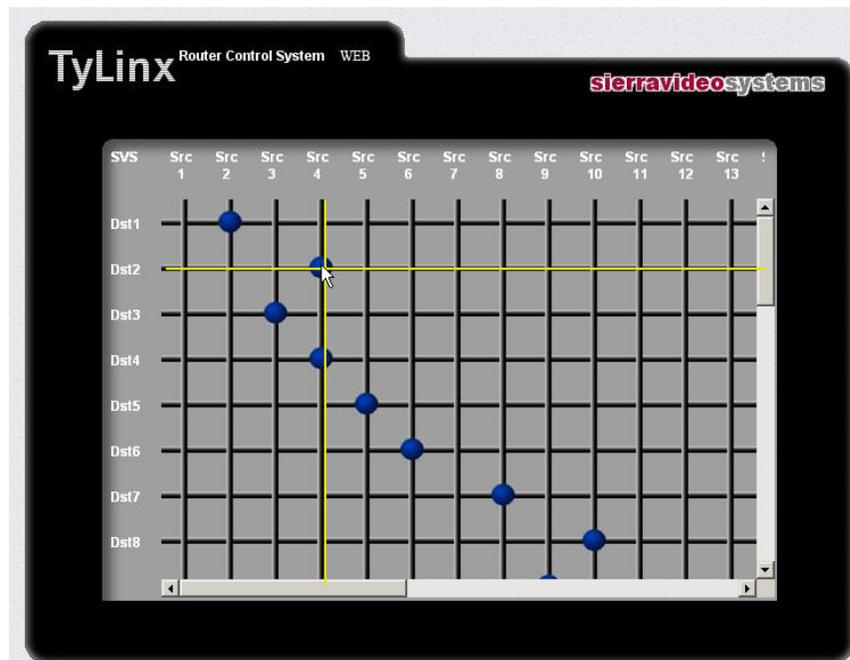

This screen displays a “grid” of sources and destinations. Left click on the I/O grid lines that intersect the source and destination to switch. Status is indicated by a blue dot at the I/O grid line.

---

**Note:**

---

*The Ethernet port will also accept HOST protocol commands to switch the router.*

## Names

Source, Destination, and level names can be applied using two methods. Names can be applied using the TyLinx Pro program (See the TyLinx Pro manual for details on naming), or names can be applied using the serial port (See the Generic Protocol section of this manual).

## Room Grouping

Room Grouping is the ability to divide the router into smaller sections in which switches can only be made within that group. A Group allows only a "user defined" number of Sources and Destinations with an AFV group (all levels), a multi-level group (several levels), or a single level group. Room Grouping is configured using the serial port. The TyLinx Pro program and Host port protocol language are the two ways to setup a Room Group. See either the TyLinx Pro manual, or the section of this manual on Communication Protocol.

## Matrix Mapping

This term applies to the ability to divide the router into several switching levels. For example, sending composite video to the Red channel, and Y/C to the Green and Blue channels of input, being able to tie either one to an output with or without audio, or the same scenario with three composite sources on the R, G, and B channels and allowing the router to address them independently.

The configuration described above is accomplished using Room Grouping. Setting up a Room Group to only switch certain levels or combinations of levels, and setting up a different Room to control other levels, you can achieve Matrix Mapping.

For example, Room 1 uses composite video. The composite video is connected to the Red channel of the switcher. The configuration of Room Group 1 is for only one level of switching, the RED channel (level 1). Room 1 is configured to switch only composite video. Room 2 uses Y/C video. The Y/C video is connected to the Green and Blue channels of the router. Room Group 2 is configured through Room Grouping to switch only the Y/C levels (levels 2 and 3).

Room Grouping is setup using the serial port. The TyLinx Pro program and Host port protocol language are the two ways to setup a Room Group. See either the TyLinx Pro manual or the section of this manual on Communication Protocol.

Unless otherwise specified at the time of order, the V5S series of routing switchers are configured at the factory with 7 levels of control as indicated by the chart below.

Level #	Type
1	R
2	G
3	B
4	H Sync
5	V Sync
6	Audio 1
7	Audio 2

---

**Note:**

*When writing commands for a "third party" controller, pay careful attention to the levels of control.*

## Sync Rate Reporting

The Pro series of routers can report the sync frequency (H or V) of all inputs. Sync frequencies can be read using the TyLinx Pro program or Host port protocol (see the Communication Protocol section of this manual).

Sync rate reporting is best used to check for correct wiring and to determine if a scaler is needed.




# Operation

## Introduction

The purpose of a routing switcher is to switch any of the inputs (source) to any one of the outputs (destination). Any input can be connected to any or all outputs but each output can only be connected to a single input. Control remains the most important component of your new system. The standard local control panel empowers full control of the routing switcher while allowing external RS-232 control via the serial port.

## Local Control Panel Operation

The standard local control panel consists of four pushbuttons, a rotary knob, and an 80-character LED display. Use these features to switch between video and audio, scroll between options, and view the status of your selected destination.

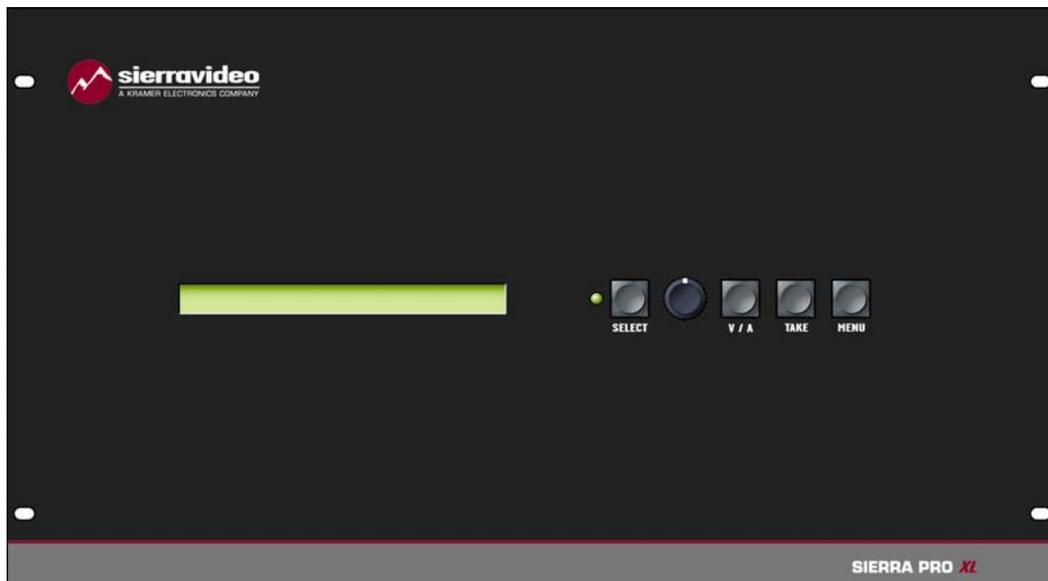

## Switcher Operation

### Button and Display Definitions

Term	Definition
Select Button	Selects which list the rotary knob changes. Navigates within a mode.
Rotary Knob	Use this buttons scroll through menu tree and select desired options.
V / A Button	Use this button to toggle between AFV, Video and Audio operation.
Take Button	Use this button to cause the router to switch the indicated input and output(s) displayed in the preset window.
Menu Button	A single push on this button toggles between "Preset", "Status by Input" and "Status by Output" in the display window. Holding down this button for 3 seconds or more, displays the Menu items described below.
Status by Output	Indicates the current inputs for the selected output on each level.
Status by Input	Indicates the current outputs for the selected input on each level.
Preset	Indicates that the system is ready to accept the input or output selection.

## Menu

Holding down the "Menu" button for 3 seconds or more will access the menu items.

Turn the rotary knob to scroll through the Menu choices.

Pressing the "select" button will display the "sub menus".

Press "A/V" to page back.


Pressing "Take" will initiate all changes made in the Menu screen.

The Menu Tree is as follows;


\* Denotes factory defaults.

Areas outlined  are selections.

# "Select System Parameters" Menu

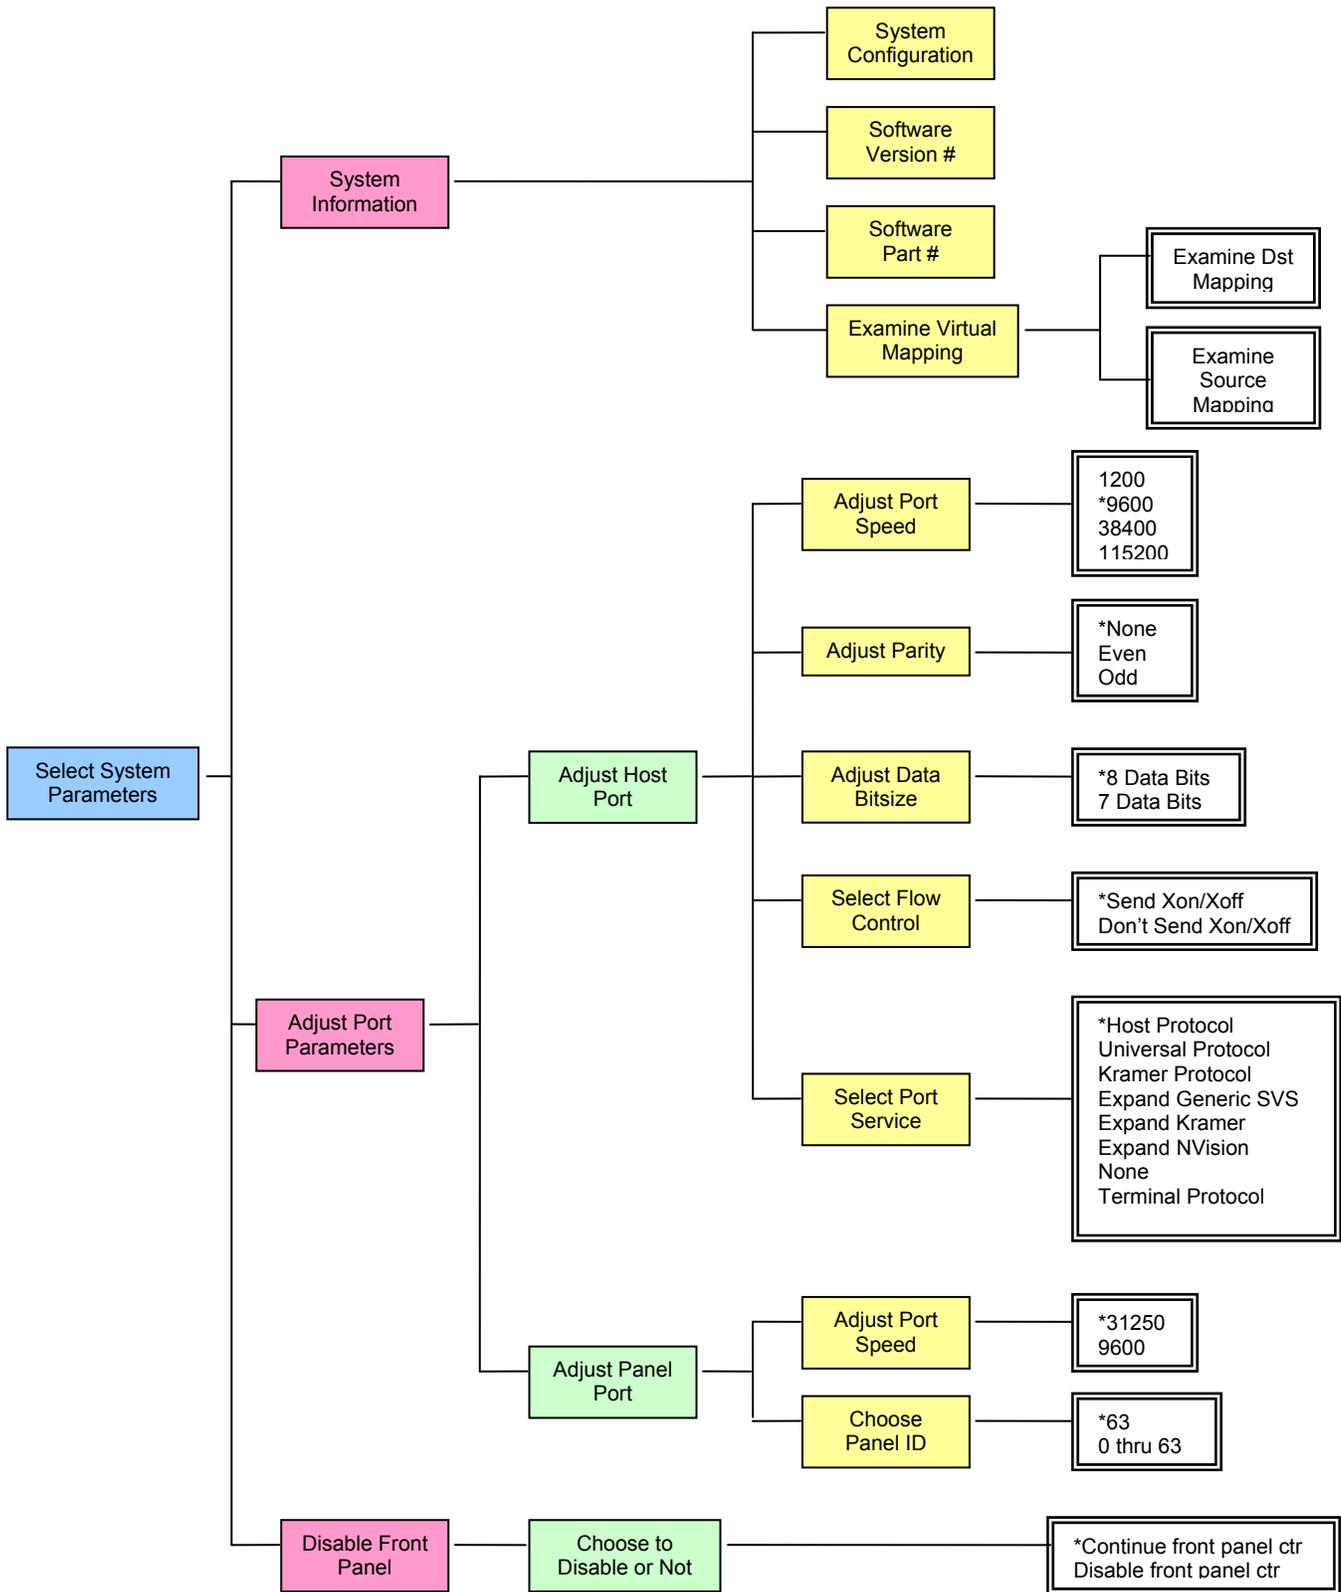


## "Adjust Audio Gains" Menu

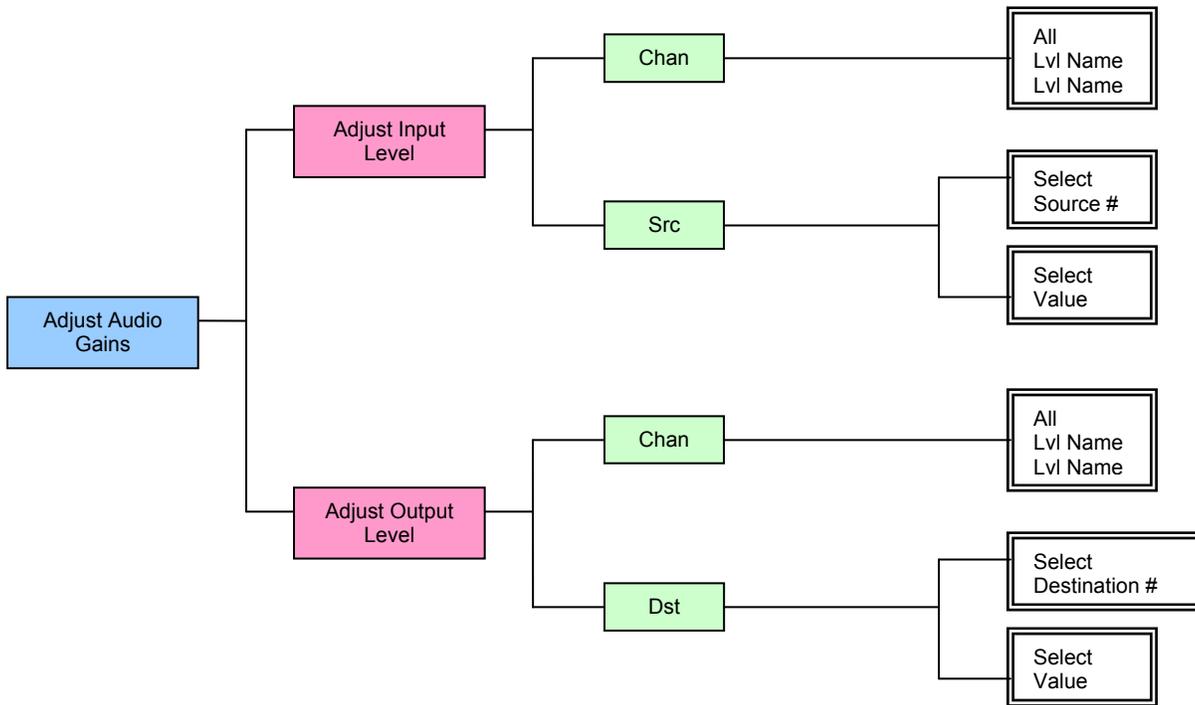

## "Select Salvo" Menu



## "Adjust A/V Muting" Menu



## “Select Room Grouping” Menu



**Select System Parameters** – Selecting system parameters allows access router configuration information and to adjust various settings of the 9 pin serial port and control panel port on the rear of the router. A “Disable Front Panel” option is also contained in this menu.

**Adjust Audio Gains** – This menu path allows the input gain to be adjusted. The input gain may be changed from –10db to +20db in .5db to 1db increments. The output gain can be changed from output mute, -61db to +15db in .5db to 1db increments.

**Select Salvo** – Allows selection and execution of Salvos stored in the router. A Salvo is a group of Sources and Destinations that are stored in the routing switcher and switched by a single “Salvo Take” command. TyLinx Pro Configuration and Routing Software allows up to 256 Salvos to be named and stored in the routing switcher. The salvo name will be displayed in the Salvo register. Salvos are made and stored in the router using the Sierra Video Software program TyLinx Pro.

**Adjust A/V muting** – A/V muting selects a delay time before audio and video appears after “Take” is pressed. Sync will be switched with only the audio and video being delayed. The range of adjustment is from 0 to 10 seconds in .5 second increments.

**Select Room Grouping** – A room group is a “user defined” group of inputs, outputs and levels. Room Groupings are configured and stored in the router using the TyLinx Pro program, or Room Groups can be configured using the serial port (contact Sierra Video for Protocol details).

## Switching the Router

Switching AFV (all levels);

- Press [V/A] until the screen displays “Preset AFV” (all levels).
- Press [Select] until “Dst” is flashing.
- Choose the Destination (output) using the rotary knob.
- Press [Select] to cause “Src” to flash.
- Choose the Source (input) using the rotary knob.
- Press [Take] to activate the switch.

---

### **Note:**

*The router can also be switched by selecting the source first by reversing the order of selecting.*

### Split Switching (break-away);

- A “split” (break-away) switch is when the video and audio of a single source is sent to different outputs.
- Press V/A until screen displays “Preset V/A”.
- Press [Select] until “Dst” is flashing.
- Choose the Destination (output) using the rotary knob.
- Pressing [Select] will cause the screen to toggle between Dst, the video and audio source, the video source only, or the audio source only.
- Toggle through the screens and select the source(s) you want to change using the rotary knob.
- Press [Take] to activate the switch.

### Switching by Level;

Switching by Level allows you to specify the level you want to switch. This mode of switching is intended for multi-frame multi-level systems.

- Press V/A until screen displays “Preset Level”. (Level should be flashing.)
- Pressing [Select] will cause the screen to toggle between Level, Dst, and Src.
- Choose the Level using the rotary knob.
- Choose the Destination (output) using the rotary knob.
- Choose the Source (input) using the rotary knob.
- Press [Take] to activate the switch.

## Status

Momentarily pressing the “Menu” button causes the display to toggle through 2 different modes;

- “Preset AFV”- This mode is used for switching the router (see above).
- “Status”- Pressing the “V/A” button will cause the status to switch between;
  - “Status by Source”
  - “Status by Destination”
  - “Status by Level”

Turn the rotary knob to select the source, destination, or level you want to status.

## Control via 9-pin Connectors

The 9-pin connectors allow you to control the routing switcher via an external computer. On some switcher models, the serial port can be changed internally for RS422 configuration (RS232 is factory configuration).

Each routing switcher model has one port and it is labeled on the back panel as "RS232/422 Control" (refer also to the illustrations of back panels shown in *Chapter 1*):

**Connection to the RS-232/422 port is made using a standard 9 pin (pin to pin) cable.**

### Conversion to RS-422:

To convert the RS-232 serial control to RS-422, remove top cover of router. Locate the processor board on the rear of the front panel. The jumpers are located in approximately the center of the processor PCB. The jumpers are labeled JP1, JP2, and JP3.

Jumper positions are as follows:

Pro Series 16 Switchers						
RS-232				RS-422		
	1	2	3	1	2	3
JP1	●	●	●	●	●	●
JP2	●	●	●	●	●	●
JP3	●	●	●	●	●	●

## Control via Ethernet

The matrix switches may be controlled via Ethernet using the Host Protocol. To control to the matrix switcher establish a TCP/IP connection to the IP addresses of the routing matrix using port number 10001. A communications program such as Hyper Access can be used to establish this connection. Once the connection is established, sending the command **\*\*!!** should cause the routing matrix to return **\*\* OK !!**. This connection supports the entire Sierra Video Host protocol command set.

## Host Mode

Series 16 routing switchers have one 9-pin RS232 connector that allows you to control the switcher using a standard personal computer or other external devices (such as Creston or AMX). The switchers are shipped in the "Host" mode but can be changed to the "Terminal" mode by the following procedure:

- Connect a terminal to the serial port and send the following command:

**\*\*HOST0!!**

The port now uses the terminal protocol.

- To restore back to the Host port, send the following command:

**\*\*HOST1!!**

## Terminal Mode

The 9-pin connector labeled RS232/422 Control can be used for simple terminal control, (V=T100 emulation capability). The terminal performs the following functions:

- Serves as an overall system controller
- Sets up the personality of the entire system (size, level control, change names, mapping, etc.)

These setups are stored in non-volatile memory so that a terminal is not required unless it is necessary to change a setup.

## Power Up

Once all signal and control connections have been made, turn on the power switch. AC to the router is indicated by an illuminated power switch button. If you have power up problems ensure that the AC fuse on the back of the switcher is seated properly.

On power up, the controller will restore the routing switcher to the last state it was in before the power was turned off including all configuration settings as well as crosspoint switcher status.

# Communication Protocol

## Introduction

The protocol uses the 7-bit ASCII character set, usually sent over an RS232-C or RS422 serial link — 9600 bps is recommended with 8 data bits and no parity. The protocol is compact, with few characters required to cause switch changes to occur. It is also human-readable and thus easy to understand and use. Several different crosspoint switch request commands are defined, so that the one that is most compact for any given switcher and application can be chosen.

The protocol is useful with both very small and very large routing switchers. The sizes of the numbers representing inputs, outputs, and levels are not fixed, but can be as large or small as necessary. Special provisions allow numbers to be packed one after another with no intervening delimiter character, in order to make the protocol compact, as long as each number is the largest size necessary for that particular switcher.

All input, output, and level numbers begin at number 1, not 0.

Unless otherwise specified at the time of order, the V5S series of routing switchers are configured at the factory with 7 levels of control as indicated by the chart below.

Level #	Type
1	R
2	G
3	B
4	H Sync
5	V Sync
6	Audio 1
7	Audio 2

---

**Note:**

*When writing commands for a “third party” controller, pay careful attention to the levels of control.*

# Generic Protocol

Commands are sent to a routing switcher in a group called a command string. A command string can contain zero or more commands, limited only by the size of the receive buffer of the router, whose size depends on the particular router model.

A command string consists of a leader string of asterisk characters, zero, or more commands, and a trailer string of exclamation marks. Larger routers require two leader (\*\*) and trailer (!!) characters, while small routers require only one, in order to make the protocol compact for those routers. The remainder of this document gives examples using doubled characters. Note that two leader/trailer characters may be sent to small routers even when only one is required, and they will still work fine.

If a leader character (\*\*) is encountered within the command string being processed by a router, the command string up to that point is discarded and a new command string is expected. This ensures that a router will always act on a complete command string sent to it, even if the previous one was never completely received.

When a command string is received, it is not acted upon (but rather, is merely buffered up) until the final trailer character (!) character of the command string is received. At that time, the routing switcher begins to execute the commands within the string.

The protocol uses only 7-bit ASCII characters. The 8th bit of received characters is treated as if it is 0. Within the command string, certain ASCII characters may be present and are ignored: any ASCII character whose code is *less than* the SPACE character (includes all control characters and the SPACE character) and the DEL (ASCII 7F) character. Alphabetic characters within the command string may be in either upper-case or lower-case letters. The router always *sends* upper case characters, except for character strings such as input, output, and level names, which may have lower case characters in them.

When sending commands *to* the router, SPACE characters are optional, but if used may only appear before and after each individual command and NOT embedded within an individual command. Within command strings sent *from* the router, a single SPACE character appears before and after each individual command. SPACES may also appear in character strings, such as input, output, and level names.

Certain commands (R, Q, L, and G) have character strings that appear as arguments. The first three, "R", "Q", and "L", have character strings only in commands sent *from* the router, and these character strings are always terminated with a ~ (tilde) character. No special character marks the start of these strings, they simply begin at the appropriate point within the command. The "G" command, on the other hand, uses the ~ (tilde) character to mark both the *start and end* of a character string argument.

Just before the router begins executing a command string, it sends a leader (\*\*) to the host (the same number as are required in commands from the host). As it executes the commands, some of them may generate additional output back to the host. These command response characters are always preceded and followed by a space character, making the response string easily human-readable.

After the command string has been executed, the routing switcher returns the string " OK " (with a single space character before and after the word "OK"), followed by the trailer (!!) and a CR (carriage return, ASCII 0D) character, to the host. This indicates that the command has executed

successfully. If an error occurs within any command of a command string, the remainder of the command string is ignored and the router returns the string " **ERROR** ", followed by *an optional descriptive string* followed by a string of trailer characters and a CR character, to the host. An error can be caused by an unknown command name or bad arguments to a command.

The simplest possible command string would be: **\*\*!** which consists of the leader and trailer characters but no commands between them. This command string would generate the response:

```
** OK !!<CR>
```

This can be useful for verifying that the serial link to the router is operational. In routers requiring only one leader/trailer character, the simplest command string would be: **\*!** which would generate the response:

```
* OK !<CR>
```

(To determine whether a particular router uses one or two leader/trailer characters, send it **"!!\*\*"** and check the response to see which of the above two responses it is. It won't hurt to always use two even if only one is required.)

The simplest error response is one with no optional descriptive string. For example, this command string:

```
** XXX !! might generate this response from the router:
```

```
** ERROR Syntax: No Number:XX !!
```

The descriptive string always ends with a colon and up to three characters from the command string that caused the error. Generally, the error can be assumed to have occurred just before these characters

## Leader and Trailer

The simplest possible command string would be **"\*\*!"** which consists of the leader and trailer characters but no command between them. This command string would generate the response **"\*\*OK!"** followed by "CR". This can be useful for verifying that the serial link to the switcher is operational.

The following is the set of commands available for sending to the router, a subset of which may be implemented in any given routing switcher.

Syntax	Example	Description
R	R	Router Reset
I	I	Capabilities Inquiry
Q	Q	Model Name and Software Version Inquiry
L	L	Matrix Size and Level Names Inquiry
O	O5	Output Status inquiry
N	N5	Input Status inquiry
S	S	Status inquiry
C	C	Clear matrix
K	K9999	Set Password to Change Protected Settings
M	M139	Set Remote Address
U {0 1}	U0	Update request on/off
V out,in,in...	V3,1,2,2	Connect levels
W lvl,in,in...	W1,4,19	Connect outputs
X out,in,lvl	X12,9,2	Connect crosspoint
Y out,in	Y1,7	Connect AFV
Z in in...	Z13,12,8	Connect AFV
D numsyncs	D300	Delay vertical sync intervals
T {A-Z}	TB	Trigger a Salvo Connect sequence
P {A-Z}	PBY1,7~	Preset a Salvo connect sequence
B	B21	Output Lock inquiry or change
F	F5	Field Delay for crosspoint output
HOST	HOST0	Select Host or Terminal Protocol
G	G1,10~	The command "G" is used to query or modify a router configuration parameter or parameters.

## "R": Router Reset

Use this command to force the routing switcher to reset, by sending it the command **"RESET"**. If an administrator password has been set (using the "G ADMIN\_PASSWORD" command described later in this document), then the password must be sent in a "K" message prior to sending this command, else this command will generate an error. For example, the command:

```
**RESET!!
```

would initiate a reset (if the password has been entered, if required), and when the router finished the reset operation, something like this would be received, just as if the router had powered up:

```
** RESET Tahoe Vx.xx (C) 2000~ !!<CR>
```

## "I": Capabilities Inquiry

The command "I" requests that command capability information be returned to the host. The information is sent as a string of characters. The first characters are a space followed by "I", the next characters are the letters of the commands that are implemented and available in this router, and the last character is "~" (tilde). Do not count on the characters being in any specific order. Search all characters for a particular one.

All routing switchers implement the **I**, **L**, **S**, and **X** commands. The Q command will eventually be added to all.

For example, the command:

```
**I!!
```

might return the following string:

```
** ILSX~ OK !!<CR>
```

indicating that the router supports the **I**, **L**, **S**, and **X** commands from the host.

## "Q": Model Name and Software Version Inquiry

The command "Q" requests that the router model name and software version number string be returned to the host. The information is sent as a string of characters. The first characters are a space followed by "Q", the next characters are the router model name, terminated by a "~" (tilde). Following this are the characters of the software version number string, again terminated by a "~" (tilde).

For example, the command:

```
**Q!!
```

might return the following string:

```
** QSmall~V2.1~ OK !!<CR>
```

indicating that the router model name is "Small" and the software version number is "V2.1".

## "L": Matrix Size and Level Names Inquiry

The command "L" requests that matrix size (Nout, Nlvl, Nin) and level name information (lvl1, lvl2, etc.) be returned to the host. The information is sent as a string of characters. The first characters are a space followed by "L", some optional values described below, then the number of outputs (Nout), a comma, the number of levels (Nlvl), a comma, the number of inputs (Nin), a comma, and then the level names, each terminated by a "~" (tilde), and the last followed by two tildes.

For example, the command:

```
**L!!
```

might return the following string:

```
** L64,3,32,VIDEO~AudioL~AudioR~~ OK !!<CR>
```

indicating that the router has 64 outputs, 3 levels, and 32 inputs, and the levels are named "VIDEO", "Audio L", and "Audio R".

## "O": Output Status Inquiry

The command "o" requests that matrix status information for a single output be returned to the host. The status information is sent as a "Y" command or a "V" command or as a sequence of L "X" commands, where L=number of levels.

For example, the command:

```
**O5!!
```

to a 3-level router might have the following three commands as its response:

```
** X65,23,1 X5,-,2 X5,0,3 !!
```

Note the dash, indicating that on level 2, output 65 is not connected to an input. Also note the 0, indicating that the connection on level 3 is either unknown or that output 65 doesn't exist or isn't mapped on level 3.

Or, a 3-level router might have the following single command as its response:

```
** V65,23,-,0 !!
```

which has the same information as the three X commands in the previous example.

If the router has only one level, or if all levels are connected the same, the router might instead use the Y command. For example:

```
** Y65,23 !!
```

## "N": Input Status Inquiry

The command "N" requests that matrix status information for a single input be returned to the host. This command is only useful on those router levels that allow an input to be connected to at most one output. The status information is sent as a "Y" command or a sequence of L "X" commands, where L=number of levels that allow an input to be connected to at most one output (each such level generates a single "X" command of status). Thus, a 6-level router with three single-output-per input levels would generate 3 "X" commands of status command output. A router that has *all of its levels* as single-output-per-input may return a single "Y" command instead of individual "X" commands if all of the levels are connected to the *same output*. The "X" and "Y" commands are formatted exactly as with the "o" command.

For example, the command:

```
**N4!!
```

to a router might have the following three commands as its response:

```
** X12,4,2 X-,4,3 X0,4,4 !!
```

giving the status of levels 2, 3, and 4 (level 1 presumably not being a single-output-per-input level). Note that on level 3 the - (dash) indicates that the input is disconnected, and on level 4 the 0 indicates that the connection to the input is either unknown or that input does not exist or is not available on that level.

If the router has only one level, or if all levels are connected the same, it might instead use the Y command. For example:

```
** Y12,4 !!
```

## "S": Status Inquiry

Use command S to request that status information be returned to the host. The status information is sent as a string of L x O substrings, where L = number of levels and O = number of outputs. Each level/output combination generates a single substring of status. Thus, a 21-level 16 output router would generate  $21 \times 16 = 336$  substrings of status command output. The length of each substring depends on the size of the particular switcher involved. Larger switchers use bigger numbers for inputs, outputs, and levels.

The first substring of status is for level 1 output 2, etc.; however, each substring contains the level and output numbers, so the sequence in which the data is sent is not important). The first characters of each substring are a space followed by "X", then the output number, a comma character, the input number connected to the output (or 0 if no connection exists), another comma, and finally the level number at which the input-output pair is connected. For example, the command:

```
**S!!
```

might have the following two substrings at the beginning of its response:

```
**x01, 12, 1 x02, 02, 1!!
```

This indicates that output 1 is connected to input 12 on level 1, and that output 2 is connected to input 2 on level 1.

The number of digits used for each number is generally the maximum number of digits ever required for that particular switcher. Thus, a switcher with between 10 and 99 inputs would use two digits for the input number, and a switcher with less than 10 levels would use one digit for the level number.

## “C”: Clear Matrix

Use command C to request that the switcher matrix be cleared so that all outputs are disconnected from inputs (in switchers where this is possible) or else all outputs at all levels have input 1 as their source. This command can take several seconds to execute (depending on the size of the switcher matrix). In order to help ensure that this command isn't accidentally executed, it requires four additional characters following the “C” character, to spell out the word “CLEAR” in full. For example, the command:

**\*\*CLEAR!!**

would clear the matrix and when finished — the following response would be generated:

**\*\*OK!!<CR>**

## “K”: Set Password

The command “K” is followed by a password, which may be 0 to *cancel* the previous password, thus causing no password to be specified, or, it may be a value between 1 and 9999 to supply a password, which remains in effect until another password (or password 0) is supplied in another “K” command. The password is stored by the router under the remote address specified using an “M” command, or under the *control port's* remote address if an “M” command was not specified before the “K” command in the same command string as the “K” command. The password that is set remains in effect until another “K” command is received from the same remote address.

It would be used to establish a password for a remote address, to be used for such things as locking and unlocking outputs and modifying the router configuration. When the router receives a protected command (one which requires use of a password) from a remote address, it compares the current password for that remote address with the password required to execute the protected command. Protected commands consist of many of the “G” commands that change router configuration, as well as *take* and *salvo trigger* commands when the output to be taken is locked. In the former case, the administrator password is the one that must be sent in the “K” command to permit the router configuration to be changed, while in the latter case the password that was used to lock the output is the one that must be sent in the “K” command to permit the *take* to occur.

Refer to the “B” command and the “G ADMIN\_PASSWORD” command (in a separate document) for more information.

For example, the command:

**\*\* M197 K1777 !!**

requests that password 1777 be stored as the current password for remote address 197. The command:

```
** M197 Y7,9 !!
```

requests that output 7 be connected to input 9, using the password stored for remote address 197 as the output lockout override password. The *take* will succeed if output 9 is either not locked or is locked with password 1777. Otherwise, the *take* will fail.

## “M”: Set Remote Address

The command “M” is followed by a remote address value, and it sets the remote address to be used by all remaining commands in the current command string. This command is supported on larger routers. It would be used when a client/server software system on a router control port permits multiple remote users to send commands to the router through that control port. In such a system, the server software that talks to the control port can insert an “M” command at the beginning of each command string it sends to the router on behalf of its clients. The server would assign a different address to each of its clients. The router uses the address to control access to and modification of protected resources. The “M” command will typically work in conjunction with the “K” command, which allows a password to be sent to the router. Some commands, such as those that allow modification of router configuration settings, might require entry of an administrator password before allowing the router configuration to be modified. The “K” command is used to send the password, but the router must be able to record that password in association with a particular remote user. The router would save the password as the one established by the remote address specified in the “M” command. The examples below show how this would work.

If the “M” command is not present in a control string received on a serial port, the address assigned to the *serial port itself* is used as the address for all commands in that command string.

The “M” command works on an honor system. There is nothing to keep a remote device from forging a false address. This conforms with the philosophy of providing protection mechanisms that are not designed to be totally hack-proof, but rather, are designed under the assumption that controlling devices will honor the system. A dedicated hacker can always hack into the system if he chooses. Note, however, that the server in a client/server relationship can provide a great deal of added security for the system, forcing the correct “M” command to be sent each time, and filtering out bogus “M” commands received from clients.

When the router receives an “M” command in a command string, it echoes the same “M” command in its response. This allows the server connected to the serial port to parse the received response string and determine to which client it should route the response.

Normally the server will assign remote addresses to its clients. However, it should always provide a way to send these addresses to the client, because the client needs to know its address in order to know how to interpret some responses. By simply passing each “M” response command received from the router back to the client, the server can let the client know what its address is.

For example, the command:

```
** M139 K9664 !!
```

establishes password 9664 as the password for remote address 139. The response to this command string would be:

```
** M139 OK !!
```

If remote address 13 later sends the command:

```
** M139 Y8,27 !!
```

to request that output 8 be connected to input 27, the router would check to see if output 8 has been locked. If so, the router compares the password of remote address 139 (which has previously been set to 96643) to the password that was used to lock output 8. If they match, the connection request succeeds, but if they don't match, output 8 is left unchanged.

## "U": Update Request on/off

The command "u" turns on or off the automatic sending of output change reports. The command letter must be followed by either a number 0, 1, or 2 to specify the new automatic change report state, as follows:

0: Automatic output change reporting is turned off.

1: Automatic output change reporting is turned on. Crosspoint change commands do not immediately report changed status, but instead, the report comes up to a few seconds after the crosspoint change command is received.

2: Automatic output change reporting is turned on, and crosspoint change commands immediately report changed status as part of the response to the command.

Output change reports are automatic messages sent to the host whenever an output is crosspoint status (i.e. connected source) is changed.

For example, the command:

```
**U1!!
```

turns on automatic output change reporting. When a crosspoint is changed, the following message might be received:

```
** X5,17,3 !!<CR>
```

indicating that output 5 is now connected to input 17 on level 3. Alternatively, if the router has only a single level or if all levels of the output are connected the same, it might send:

```
** Y5,17 !!<CR>
```

indicating that output 5 is now connected to input 17. Alternatively, newer routers might use the "V" command instead of "X" commands to report a change:

```
** V5,17,12,0 !!<CR>
```

indicating that output 5 is now connected to input 17 on level 1, to input 12 on level 2, and does not exist or is not available on level 3.

To turn off output change reporting, use the command:

```
**U0!!
```

The difference between an argument value of 1 versus 2 has to do with the response generated by the router when it receives a crosspoint connect command ("V", "W", "X", "Y", or "Z" command). For example, suppose the router sends the following crosspoint connect commands in a single command sequence:

```
** Y1,18 Y8,34 !!
```

If U1 is in effect, the response to this command will be:

```
** OK !!<CR>
```

and then sometime later, perhaps up to several seconds later, the crosspoint change reports will be sent as separate command sequences for each output:

```
** Y1,18 !!<CR>
```

```
** Y8,34 !!<CR>
```

On the other hand, if U2 is in effect, the response to the original crosspoint change command sequence will be:

```
** Y1,18 Y8,34 OK !!<CR>
```

and no additional crosspoint change reports will be sent because they already HAVE been sent. The U2 mode of operation is generally more convenient because it produces more immediate feedback to the controlling device that is sending a crosspoint change command. The U1 mode of operation is provided for compatibility with older control systems.

## "V": Connect Levels

The command "v" is used to request that a connection be made. It must be followed by an output number, a comma, and a comma-separated list of input numbers, one for each level, up to the number of levels in the router. Fewer than the number of levels may be specified if desired, and the remaining levels will be left unchanged.

For example, the command:

```
**V12,7,8,9!!
```

says that connections are to be made to output 12: from input 7 on level 1, input 8 on level 2, and input 9 on level 3.

An input number of 0 means the output connection is to be left *unchanged*.

An input number of - (dash) means the output is to be *disconnected*. If the router does not support disconnected outputs, the output connection will be left unchanged.

## "W": Connect Outputs

The command "w" is used to request that a connection be made. It must be followed by a level number, a comma, and a comma-separated list of input numbers, one for each output, up to the

number of outputs in the router. Fewer than the number of outputs may be specified if desired, and the remaining outputs will be left unchanged.

For example, the command:

```
**W1,17,3,9!!
```

says that connections are to be made on level 1: from input 17 to output 1, input 3 to output 2, and input 9 to output 3.

If the level number is specified as "0", this means that the connection is to be made on **all levels** (AFV).

For example, the command:

```
**W0,8,3,7!!
```

says that connections are to be made on all levels: from input 8 to output 1, input 3 to output 2, and input 7 to output 3.

An input number of 0 means the output connection is to be left *unchanged*.

An input number of - (dash) means the output is to be *disconnected*. If the router does not support disconnected outputs, the output connection will be left unchanged.

It is an error to request connection of an input or output that doesn't exist on the specified level, even if the input or output does exist on some other level. However, if the level number is "0", any input or output may be used as long as it exists on at least one level, and in that case no connection will be made on any level on which the input and output does not exist. If the requested connection has an output or input number that isn't mapped to a physical connector (on virtual-mapped routers) on one or more levels, those levels are simply not changed.

If "U2" is in effect (see "U" command), the response will include one or more V, Y, or X commands to report the new status of the outputs. The response will be the same as if "O" commands were issued for the outputs immediately following the "W" command. No response is generated if this command is being used to define a salvo.

## "X": Connect Crosspoint

Use command X to request that a connection be made. It must be followed by an output number, a comma, an input number, a comma, and a level number. For example:

```
**X8, 3, 2!!
```

This string says that a connection is to be made between output 8 and input 3 on level 2. If the level number is specified as "0", this means that the connection is to be made on all levels (AFV). For example, the command:

```
**X8, 3, 0!!
```

This string says that a connection is to be made between output 8 and input 3 on all levels.

## "Y": Connect AFV

Use command Y to request that a connection be made. It must be followed by an output number, a comma, and an input number. The connection is made on all levels (AFV). For example, the command:

```
**Y2, 8!!
```

This string says that input 8 is to be connected to output 2 on all levels.

## "Z": Connect AFV

The command "z" is used to request that a connection be made. It must be followed by a comma-separated list of input numbers, one for each output, up to the number of outputs in the router. Fewer than the number of outputs may be specified if desired, and the remaining outputs will be left unchanged. The connection is made on all levels (AFV).

For example, the command:

```
**Z4,18,7!!
```

says that input 4 is to be connected to output 1 on all levels, input 18 to output 2 on all levels, and input 7 to output 3 on all levels.

An input number of 0 means the output connection is to be left *unchanged*.

An input number of - (dash) means the output is to be *disconnected*. If the router does not support disconnected outputs, the output connection will be left unchanged.

Any input or (implied) output number may be specified as long as it exists on at least one level. No connection will be made on any level on which an input or (implied) output number does not exist. If the requested connection has an output or input number that isn't mapped to a physical connector (on virtual-mapped routers) on one or more levels, those levels are simply not changed.

If "U2" is in effect (see "U" command), the response will include one or more V, Y, or X commands to report the new status of the outputs. The response will be the same as if "O" commands were issued for the outputs immediately following the "Z" command. No response is generated if this command is being used to define a salvo.

## "D": Delay vertical sync intervals

The command "D" is used to delay before continuing execution of the commands that follow. It must be followed by a number giving the number of vertical sync intervals by which to delay. If the number is 1, the delay will be to the VERY NEXT vertical sync interval. If the number is 0, no delay occurs. The number must be no larger than 255. Note that this command will also delay the time at which the remaining command responses and the trailer character are returned to the host.

For example, the command:

```
** Y1,5 D200 D100 Y1,6 S !!
```

says that input 5 is to be connected to output 1 on all levels, then a delay of 300 (=200+100) sync intervals is to occur, then input 6 is to be connected to output 1 on all levels, then a status response is to be returned.

It is generally recommended that the host computer be responsible for timing the initiation of commands, rather than using this command to do the job. The host computer can simply send the appropriate commands at the appropriate times. The "P" and "T" commands described below can aid in ensuring that lengthy connect sequences aren't delayed due to the time it takes to send them to the router.

## "T": Trigger a Salvo

The command "T" is used to trigger a previously set up *salvo* (set using the "P" command above). It must be followed by a register letter from A to Z or a register number from 1 to 256 giving the *register* to be triggered.

For example, the command:

```
** TB D180 TC !!
```

says to trigger salvo register B (same as 2), delay 180 sync intervals, then trigger salvo register C (same as 3). When the register is triggered, this means that the connect commands stored in it take effect.

If a salvo is triggered and it attempts to connect a locked output or port, or a disallowed input/output pair, or a port to itself, the salvo trigger operation is aborted, no crosspoint changes are performed, and an error is reported: "ERROR Salvo Has Locked Xpts".

## "P": Preset a Salvo

The command "P" is used to set up a *salvo*, which is a series of connect commands for later execution with the "T" command. It must be followed by a register letter from A to Z or a register number from 1 to 256 giving the *register* into which the connect sequence is to be stored, followed by zero or more *connect commands* (V, W, X, Y, or Z), followed by a "~" (tilde) character.

Registers A-Z are the same registers as 1-26. The letter designators are allowed to shorten up the command sequence slightly, so that "T" commands can be sent in compact form if one of the first 26 registers is used.

For example, the command:

```
** PB X2,5,0 Z7 ~ !!
```

says that two connect commands (output 2 to input 5 AFV, and output 1 to input 7 AFV) are to be stored into salvo register B (i.e. register 2). Another example:

```
** P239 Y5,7 ~ !!
```

says that one connect command (output 5 to input 7 AFV) is to be stored in salvo register 239.

Only *supported connect commands* (those connect commands whose command letters appear in the "I" command response) may follow the register letter up to the tilde character. The connect commands do not take effect until the register is *triggered* using the "T" command below.

The maximum allowed number of connect commands is determined by the particular router. In all cases where this command is implemented, there is guaranteed to be space available to store at least two complete switch matrices AT ONE LEVEL. If more connect commands are received than there is space available to store them, the error response string "FULL ERROR Salvo Space Full" is sent to the host, and only the first part of the salvo is stored. For example:

```
** FULL ERROR Salvo Space Full !!
```

says that the salvo request filled memory and the salvo could not be completely stored.

## "B": Output Lock inquiry or change

The command "B" requests that lock information for the specified output be returned to the host, and optionally that the lock status of that output be changed. Whenever the router receives a "B" command, it sends one back.

In routers that support the "B" command, the router reports changes to output lock status using the "B" command, not the "G OUTPUT\_LOCK" command.

When an output is locked, it cannot be routed to a new input unless the password sent using the "K" command matches the password used to lock the output.

In virtual-mapped routers, this command applies lockouts to *virtual destinations* rather than *physical outputs*, so the word "output" should be replaced with "destination" in this command description.

If the "password" and "lock" arguments are both 0, this is a query for lock status of the specified output. A "B" command is sent to report the lock status.

If the "password" argument is not 0, this is a request to change the lock status of the specified output. After changing the lock status, a "B" command is sent to report the new lock status, so a response occurs regardless of which form of the "B" command is sent to the router.

When requesting that lock status be changed, if "lock" is 0, this is a request to unlock the output, and if "lock" is 1, this is a request to lock the output. An attempt to lock an output that is already locked, or to unlock an output that is already unlocked, fails, as does an attempt to unlock an output using a password that is different from the password that the output was locked with and is not the administrator password. Any use of a password larger than 9999 also fails. In any of those cases, the output lock status remains unchanged and an error response is generated. The "B" command response will indicate that the output still has the same lock state as before.

In the "B" command response that is sent by the router, the "password" argument is the current lock password for the output (1-9999), or is 0 if the output is not locked, and the "lock" argument is 0 if the output is not locked, or 1 if it is locked.

When locking an unlocked output, the specified password is recorded by the router as the lock password for that output. When unlocking a locked output, the specified password is compared by the router to the lock password for the output. If they match, or if the specified password is the administrator password, the output is unlocked, else it remains locked. Attempting to lock an

already-locked output, or unlock an already-unlocked output, has no effect on the lock state of that output.

Whenever a *take* is done, the router checks to see if the specified output for the *take* has been locked. If so, the current password of the control port that sent the *take* request (as set with the “K” command) is compared to the output’s lock password. If they match, the *take* is allowed, but if not, the *take* has no effect. The *administrator password may NOT be used in lieu of the output’s lock password to do a take*, so if a controlling device sends the administrator password in a “K” command, that will not permit the device to reroute locked outputs (but it can use the administrator password to unlock locked outputs using the “B” command).

Output lockouts apply on *all levels*. On virtual-mapped routers, a level may be left out of a lockout by making sure the level is unmapped for the destination being locked.

As with all router configuration parameters, the output lockout data is stored in non-volatile storage and thus is retained across router power-ups. When a router is first initialized at the factory, all outputs are set to be unlocked.

This command provides the same functionality as the “G OUTPUT\_LOCK” command. This command, which was added at router software version V5.06, is preferred over that command. Note that the output lock version number is not present in this command. Since output lock status changes frequently, it is not really useful to cache output lock status for outputs, so the output lock version number is not really useful.

For example, to request whether or not output 21 is locked:

```
** B21,0,0 !!
```

The response might be:

```
** B21,0,0 OK !!
```

indicating that output 21 is NOT locked. Or, the response might be:

```
** B21,6741,1 OK !!
```

indicating that output 21 is locked with password 6741. To clear this lockout:

```
** B21,6741,0 !!
```

To lock output 96 using password 439:

```
** B96,439,1 !!
```

If successful, the response would be:

```
** B96,439,1 OK !!
```

If output 122 becomes locked using password 235, the following change report would be sent by the router:

```
** B122,235,1 !!
```

## “F”: Field Delay

The command “F” is used to specify the delay between the time a crosspoint change request is received by the router and the time the crosspoint switch actually occurs. It must be followed by a number giving the number of video fields of delay desired. If the number is smaller than the smallest delay that the router can handle, the smallest delay is used instead. If it is larger than the largest delay the router can handle, the largest delay is used instead. Note that this command does not cause a delay in command processing, as the “D” command does.

To understand this command more fully, consider the way that router software will typically handle a crosspoint command. The last character of the command string, the final “!” (exclamation) character, is received somewhere in a particular video field, call it video field 7. The router parses the command string and, for each crosspoint it contains, it puts the crosspoint in a buffer that is marked to be delivered to the crosspoint hardware on a particular video field. Suppose that previously, an “F5” command has been received. Then crosspoint commands whose final “!” command string character was received on video field 7 would be placed in a buffer that is marked to be delivered to the crosspoint hardware at video field 13 ( $7+5+1=13$ ).

To understand the reason for adding 1 in the previous sum, consider an “F0” command: it would ask for output at the very next video field, field 8 in our case. So, it is necessary to add the “F” argument plus 1 to the field number on which the crosspoint command is received to get the field number at which the crosspoint will be output.

A typical router will have a minimum delay that is between 1 and 2 fields. Suppose a crosspoint command is received just before a vertical field mark. The software may be able to prepare the crosspoint data and send it to the hardware when that vertical field mark occurs, but the hardware itself typically has a one-field delay in it, so the soonest that such a crosspoint would switch would be one field (plus a little) from when it was received. If the command were received towards the beginning of a field rather than the end of a field, the delay would be closer to two fields. Industry parlance is to call this a one-field delay, because only *full fields* of delay are counted.

The *delayfields* argument of this command takes into account the hardware delay. So, if a router has a minimum delay, including the hardware delay, of one full field, as described in the previous paragraph, then a *delayfields* value of 1 causes this minimum delay to be used. A *delayfields* value of 0 will also cause this minimum delay, because the router uses its minimum if a smaller value is specified. A *delayfields* value of 2, however, will add one more field to the minimum possible delay. Thus, *delayfields* specifies the *number of full fields* of delay between end-of-crosspoint-command-string-received and crosspoint-switch-occurs. Note that the actual minimum value of *delayfields* depends on the particular router model.

Routers typically have a limit to the number of crosspoint commands they can process in one field. First, there is an inherent delay in *sending* the command to the router, but beyond that, the router requires time to parse the command and buffer up the crosspoint data, plus it requires time to deliver the buffered data to the hardware when the desired video field arrives. Each individual router has documentation to describe its limitations on how many crosspoints it can process in a given amount of time.

Larger values for *delayfields* give the router more time to process commands. Although the long-term average number of crosspoints that can be processed per unit of time is unchanged, a larger *delayfields* value can improve router performance during a short burst of many crosspoint commands. For example, suppose a large number of crosspoint commands is sent to the router in a single large command. If *delayfields* is small, the router typically won't have time to parse and process all these crosspoint commands and place the data in the crosspoint delivery buffer before the target video field arrives. By making *delayfields* larger, the user can give the router more time to process the crosspoint commands.

If too many crosspoint commands are received and the router is not able to process them fast enough, it will output the crosspoint connections as soon as it can. Unexpected delays in crosspoint output are a sign that the router is being pushed beyond its limits.

The *fielddelay* value applies to the *entire router*, not just to the control port on which the “F” command is received. It is therefore recommended that a single value be settled on for the *fielddelay* value, rather than changing the value constantly depending on needs. Once changed, the router records the value in non-volatile memory and uses it each time it is powered up, so it is only necessary to change it one time.

Even though a crosspoint isn’t changed until the *fielddelay* time has elapsed, the router records the new crosspoint state *immediately upon receiving the crosspoint change request*, so a controlling device may receive a report of a crosspoint change before the change has actually taken effect, and this is more likely to happen the larger *fielddelay* is. Since routers currently make no guarantees about when they will report a crosspoint change anyway, this behavior is usually of no concern. There is a case where this could cause problems. If the *fielddelay* value were to be changed while two different devices were changing the same output, it is possible for the router to report the incorrect input value for that output. This would happen if the earlier device that changed the output did so before the *fielddelay* value was changed, and the later device that changed the output did so after the *fielddelay* value was reduced but soon enough that its input value would be sent to the crosspoint hardware before that of the earlier device. A bit later, the earlier device’s input value is sent to the crosspoint hardware, but the router has recorded the later device’s input value as being the one in effect. To prevent this scenario, we recommend that an appropriate *fielddelay* value be chosen, set, and left alone.

Here is an example of an “F” command:

```
** F5 Y1,5 X2,6,3 !!
```

This says that input 5 is to be connected to output 1 on all levels and input 6 is to be connected to output 2 on level 3, after a delay of 5 fields from the beginning of the field that follows receipt of the “!” character.

## Basic “G” Command:

<u>Action</u>	<u>From</u>	<u>Syntax</u>
Modify	Host	G command_name { arguments... } ~
Query	Host	G command_name { arguments... } ~
Query Response	Router	G command_name { arguments... } ~
<b>Modify is Protected:</b>	<b>Yes</b>	
<b>Report Changes:</b>	<b>No</b>	

The command “G” is used to query or modify a router configuration parameter or parameters.

Summary lines at the start of each command section describe, for each type of command action (Modify, Query, or Query Response), whether the command is sent to the router or from the router and what the *syntax* of the command is. They also indicate whether or not the *modify* form of the command is password-protected or not (“Modify is Protected”) and whether or not the command participates in automatic reporting of parameter changes (“Report Changes”) as described under the “G REPORT\_CHANGES” command.

Each command has three possible syntax forms:

1. *Modify*: this form is sent to the router to modify a parameter value
2. *Query*: this form is sent to the router to query for a parameter value
3. *Query Response*: this form is sent by the router to report the value of a parameter in response to receiving a *Query* or in response to a change in the parameter value when automatic reporting of parameter changes is turned on.

Generally, the command arguments identify the parameter that is being queried or modified, and provide its new value if it is being modified. The first argument following the “G” command character is a *command name*. Additional arguments may be required for some command names to completely specify the parameter in question. After those, one or more additional *optional* arguments may give a new value for the parameter. All arguments are separated from one another by commas.

When the *Modify* form of the command is used and if the new value is a valid value, the router will change the parameter value to this new value, providing that “Modify is Protected” says “No” or the administrator password has been sent using the “K” command. It will then report the new value to all router control ports that have requested these reports, providing that “Report Changes” says “Yes”. If a new value is provided that is an illegal value, the parameter is left unchanged and no “G” command is sent.

When the *Query* form of the command is used, the *Query Response* form of the command is returned to the control port that sent the *Query* command, reporting the current value of the parameter. The *Query* form of a command is normally the same as the *Modify* form except that the new parameter values are not included. The *Query Response* form of a command is normally the same as the *Modify* form (but of course the sender and receiver are reversed in these two cases).

Some “G” commands may initiate an action or report the occurrence of an event, instead of querying or changing a router parameter.

Commas are used to separate arguments in the “G” command.

*Space characters* should not appear within the “G” command arguments, except when they appear within strings. Also, a single space character is allowed after the “G” character itself. When a “G” command is sent by the router, it will always include this space, but the space is optional when sending a “G” command to the router.

*Character string* arguments are delimited on both sides by a *tilde* (~) character. Generally character strings may contain any printable ASCII character except *tilde*, *asterisk*, and *exclamation*.

Every “G” command must be terminated with a *tilde* (~) character. This allows a command parser to ignore any received “G” command that has a `command_name` that it doesn’t know about.

The “G” commands available for any given router may vary, depending on the router model. The “G SUPPORTED” command allows controllers to find out whether particular “G” commands are supported by a given router or not.

A router may be sent “G” commands that it doesn’t understand. It will simply ignore them and generate an ERROR response.

## VAR: Modify or query system variables

Action	From	Syntax
Modify	Host	G VAR,<varname>,<value>[,<value>...]-
Query	Host	G VAR,<varname>~
Query Response	Router	(same as Modify)
Modify is Protected:	Yes	
Report Changes:	No	

The “G VAR” command is used to change or query system variables that control specific features of the router. The variable being affected is specified using its name, and only one variable at a time can be targeted by this command. The features being controlled are typically system options that allow the user to control special hardware or software enhancements to the router code.

The *Modify* command has two or more arguments, the name of the variable to be changed and the new value of that variable. Most variables have only a single value associated with them, but it is possible for a variable to be multi-valued, in which case the number of <value> arguments may be two or more.

The *Query* command has the variable name whose value is to be queried as the only argument.

The *Query Response* command has the same argument structure as the *Modify* command.

Each different router may support different variables. The supported variables may grow over time, as enhancements are added to this protocol, so command parsers should generally ignore unknown variable names. The routers themselves will ignore any command that is received with an unknown variable name or an invalid variable value. Use the “G VARQRY” command to find out which variables a particular router actually supports. Refer to documentation for each router for a description of the variables.

A variable value is typically an unsigned decimal number, but may also be a signed decimal number. The “G VARQRY” command can be used to determine the allowed range of values.

For example, to query for the value of a variable named “VI\_DELAY”:

```
** G VAR,VI_DELAY~ !!
```

The response command might be:

```
** G VAR,VI_DELAY,4~ !!
```

To set the “HD\_SLAVE” variable to 1:

```
** G VAR,HD_SLAVE,1~ !!
```

## VAR1: Modify or query single-dimensional array variables

Action	From	Syntax
Modify	Host	G VAR1,<varname>,<index>,<value>[,<value>...]-
Query	Host	G VAR1,<varname>,<index>~
Query Response	Router	(same as Modify)

**Modify is Protected:** Yes  
**Report Changes:** No

The “G VAR1” command is used to change or query single-dimensional array variables that control specific features of the router. The variable being affected is specified using its name and an array index that varies from a minimum value (typically 0 or 1) to some maximum value, and only one such variable at a time can be targeted by this command. The features being controlled are typically options that allow the user to control special hardware or software enhancements as a function of router level, input number, or output number, although the array variable is general-purpose in nature and will be used whenever a single-dimensional array is appropriate.

The *Modify* command has three or more arguments, the name of the array variable to be changed, the index within the array of the variable to be changed, and the new value of that variable. Most variables have only a single value associated with them, but it is possible for a variable to be multi-valued, in which case the number of <value> arguments may be two or more.

The *Query* command has the name and index of the array variable whose value is to be queried as its two arguments.

The *Query Response* command has the same argument structure as the *Modify* command.

Each different router may support different single-dimensional array variables. The supported single-dimensional array variables may grow over time, as enhancements are added to this protocol, so command parsers should generally ignore unknown variable names and out-of-range index values. The routers themselves will ignore any command that is received with an unknown variable name, an index that is out of range, or an invalid variable value. Use the “G VAR1QRY” command to find out which single-dimensional array variables a particular router actually supports, and what the valid index range is. Refer to documentation for each router for a description of the variables.

A variable value is typically an unsigned decimal number, but may also be a signed decimal number. The “G VAR1QRY” command can be used to determine the allowed range of values.

For example, to query for the value of the fifth element of an array variable named “SYNC\_SOURCE”:

```
** G VAR1,SYNC_SOURCE,5~ !!
```

The response command (or a command to set the variable to this value) might be:

```
** G VAR1,SYNC_SOURCE,5,3~ !!
```

## VAR2: Modify or query two-dimensional array variables

<u>Action</u>	<u>From</u>	<u>Syntax</u>
<b>Modify</b>	Host	G
		VAR2,<varname>,<index1>,<index2>,<value>[,<value>...]~
<b>Query</b>	Host	G VAR2,<varname>,<index1>,<index2>~
<b>Query Response</b>	Router	(same as <b>Modify</b> )

**Modify is Protected:** Yes  
**Report Changes:** No

The “G VAR2” command is used to change or query two-dimensional array variables that control specific features of the router. The variable being affected is specified using its name and two

array indexes that vary from minimum values (typically 0 or 1) to some maximum values, and only one such variable at a time can be targeted by this command. The features being controlled are typically options that allow the user to control special hardware or software enhancements as a function of router level and either input or output number, although the array variable is general-purpose in nature and will be used whenever a two-dimensional array is appropriate.

The *Modify* command has four or more arguments, the name of the array variable to be changed, the two indexes within the array of the variable to be changed, and the new value of that variable. Most variables have only a single value associated with them, but it is possible for a variable to be multi-valued, in which case the number of <value> arguments may be two or more.

The *Query* command has the name and the two indexes of the array variable whose value is to be queried as its three arguments.

The *Query Response* command has the same argument structure as the *Modify* command.

Each different router may support different two-dimensional array variables. The supported two-dimensional array variables may grow over time, as enhancements are added to this protocol, so command parsers should generally ignore unknown variable names and out-of-range index values. The routers themselves will ignore any command that is received with an unknown variable name, with an index that is out of range, or an invalid variable value. Use the “G VAR2QRY” command to find out which two-dimensional array variables a particular router actually supports, and what the valid index range is. Refer to documentation for each router for a description of the variables.

A variable value is typically an unsigned decimal number, but may also be a signed decimal number. The “G VAR2QRY” command can be used to determine the allowed range of values.

For example, to query for the value of the (3,87) the element of an array variable named “GAIN”:

```
** G VAR2,GAIN,3,87~ !!
```

The response command (or a command to set the variable to this value) might be:

```
** G VAR2,GAIN,3,87,29~ !!
```

## AUDINP\_GAINS: Audio Input Gain Adjustment

Varname: AUDINP\_GAINS

Use: Modify and query input audio gain values.

Routers: SPII, VS

Syntax: G VAR1,AUDINP\_GAINS,input\_num [,value] ~

Values:

The ‘index’ field is the input number, which can range from 1 to 64.

The ‘value’ field is the audio gain adjustment. This number represents an index into an array of gain values. The index ranges from 0 which represents the most negative gain value to 41 which represents the most positive gain value. A value of 20 will set the input gain to unity.

The actual table of values reads as follows:

Index	Gain Value	Increment
0 to 19	-10.0 to -0.5	one half db steps
20	0 (Unity gain)	
21 to 41	+0.5 to +20.5	one db steps

Example: **\*\* G VAR1, AUDINP\_GAINS, 4, 20~!!** Set input 4 to unity gain.

## AUDOUT\_GAINS: Audio Output Gain Adjustment

Varname: AUDOUT\_GAINS

Use: Modify and query output audio gain values for SPII and VS type routers.

Syntax: G VAR1,AUDOUT\_GAINS,output\_num [,value] ~

Values:

The 'index' field is the output number, which can range from 1 to 64.

The 'value' field is the audio gain adjustment. This number represents an index into an array of gain values. The index ranges from 0 which represents the most positive gain value to 77 which represents the most negative gain value and 78 which represents "mute" or no audio. A value of 30 will set the output gain to unity.

The actual table of values reads as follows:

Index	Gain Value	Increment
0 to 29	+15.0 to +0.5	one half db steps
30	0 (Unity gain)	
31 to 64	-0.5 to -33.5	one db steps
65 to 77	-35.5 to -59.5	two db steps
78	"mute"	

Example:

**\*\* G VAR1, AUDOUT\_GAINS, 8, 78~!!** Set output 8 to "mute".

**\*\* G VAR1, AUDOUT\_GAINS, 1, 0~!!** Set output 1 to the highest positive level: +15db.

MUTE\_DELAYS: Mute Delay Adjustment

Varname: MUTE\_DELAYS

Use: Modify and query output mute delay values.

Routers: SPII

Syntax: G VAR1,MUTE\_DELAYS,output\_num [,value] ~

Values:

The 'index' field is the output number, which can range from 1 to 64.

The 'value' field is the amount of mute delay time in one half second increments. Each half second increment is represented by a value that is actually 10 times the delay desired. Thus, a delay of 4.5 seconds is represented by the value 45.

Example:

**\*\* G VAR1, MUTE\_DELAYS, 5, 100~!!** Set the amount of time to mute the signal before turning it on to the maximum value of 10 seconds.

**\*\* G VAR1, MUTE\_DELAYS, 6, 35~!!** Set the delay time to 3.5 seconds.

### SYNC\_REPORT: Query for sync rate info for sources connected to pulse boards

Action	From	Syntax
Modify	Host	(none)
Query	Host	G SYNC_REPORT,<level num>,<src_num>~
Query Response	Router	G SYNC_REPORT,< level num >,< input num >,<frequency>~
Modify is Protected:	N/A	
Report Changes:	No	

Some routers include 'pulse' boards that can report the sync rate of the sources connected to them. This command is a query only command to obtain a source sync rate.

<frequency> is the value returned in the response message and gives the sync rate frequency in hertz. This value has a resolution of 21 bits and thus a maximum value of 2.09Mhz.

For example, to query for the sync rate of source 2 on level 5:

**\*\*G SYNC\_REPORT,5,2~!!**

The returned response could be:

**\*\*G SYNC\_REPORT,5,2,35535~!!** - or -

**\*\*G SYNC\_REPORT,5,2,0~!!** Indicating that no signal is connected to that source on level 5.

**Details of the "G" command can be found on our website or by contacting the factory.**

## Commonly Used Switching Commands

This section contains the most commonly used switching commands. These commands are explained in detail in the proceeding section and are merely meant as a “short cut” for programmers.

### “Y” Command- All Levels

The “Y” command switches all levels (i.e. video and audio).

For example;

**\*\*Y2,8!!**

This string says that input 8 is to be connected to output 2 on all levels.

### “X” Command- Specify Levels

Using the “X” command requires that a level is specified.

For example;

**\*\*X8, 3, 2!!**

This string says that a connection is to be made between output 8 and input 3 on level 2. If a level number of “0” is used, all levels are switched.

### “V” Command- Connect Levels

The “V” command is followed by an output number, a comma, and an input number for each level, up to the number of levels on the router.

For example;

**\*\*V12, 7, 8, 9!!**

This string says that connections are to be made to output 12 from input 7 on level 1, input 8 on level 2, and input 9 on level 3.

Unless otherwise specified at the time of order, the V5S series of routing switchers are configured at the factory with 7 levels of control as indicated by the chart below.

Level #	Type
1	R
2	G
3	B
4	H Sync
5	V Sync
6	Audio 1
7	Audio 2

---

**Note:**

*When writing commands for a “third party” controller, pay careful attention to the levels of control.*



# Troubleshooting

## Introduction

---

### **NOTES:**

---

*If the output signal is disturbed or interrupted by electromagnetic interference, the signal should return and stabilize when the interference ends. If not, turn the power switch off and on again to reset the switcher.*

*If the following recommended actions still do not result in satisfactory operation, please consult your Sierra Video Dealer.*

## Power and Indicators

Problem	Remedy
No power	<ul style="list-style-type: none"> <li>▪ Confirm that the rocker switch is in the “ON” position, and that the power lamp is illuminated.</li> <li>▪ Confirm that power connections are secured at the switcher and at the receptacle. Make sure the receptacle is active, with the proper mains voltage.</li> <li>▪ If there is still no power, check the fuse. Remove power cord from the AC outlet and from the switcher and then remove the fuse holder located above the power connector. Confirm that the fuse is good by looking at the fuse wire connected to the ends of the fuse. If the wire is separated, replace the fuse.</li> </ul>

## Video Signal

Problem	Remedy
<p>No video at the output device, regardless of input selected.</p>	<ul style="list-style-type: none"> <li>▪ Confirm that your sources and destination device are powered on and connected properly. Video signals connected to the input of the switcher should be of an identical signal format as the output of your source. Video signals at the output of your switcher should be of an identical signal form required by your video monitor or recorder.</li> <li>▪ Confirm that any other switchers in the signal path have the proper input and/or output selected.</li> <li>▪ Use a Video Tester to test the video path leading to/from your Matrix Switcher.</li> <li>▪ Replace the video crosspoint module with one that is known to be functional.</li> </ul>
<p>Video level is too high or too dim.</p>	<ul style="list-style-type: none"> <li>▪ Verify that the video line is terminated with a precision 75 ohm impedance, otherwise it results in a video level that is too high or too low when looping is performed and the termination is not within 1% of 75 ohms.</li> <li>▪ Confirm that the connecting cables are of high quality, properly built and terminated with 75 ohms. Check level controls located on your source input device or output monitor or recorder.</li> <li>▪ Replace the video crosspoint module with one that is known to be functional.</li> </ul>

Problem	Remedy
<p>Noise bars are "rolling" up or down in the output image or: Low Frequency hum in the audio output of the audio</p>	<p>Hum bars (ground loop) are caused by a difference in the ground potential of any two or more devices connected to your signal path. Passing that voltage difference through any available interconnection, including your video cables, creates hum bars in the picture and/or hum in the audio.</p> <p><b>WARNING!</b></p> <p>Do not disconnect the ground from any piece of video equipment in your signal path!</p> <p>Check the following to remove hum bars:</p> <ul style="list-style-type: none"> <li>▪ Confirm that all interconnected equipment is connected to the same phase of power, if possible.</li> <li>▪ Remove equipment connected to that phase that may introduce noise, such as motors, generators, etc.</li> <li>▪ Disconnect all interconnect cables and reconnect them one at a time until the ground loop reappears. Disconnect the cable, or insert an isolation transformer in the signal path.</li> </ul>

## Audio Signal

Problem	Remedy
No audio at the destination device, regardless of source selected	<ul style="list-style-type: none"> <li>▪ Confirm that your sources and destination device are powered on and connected properly. Audio signals connected to the input of your switcher should be properly wired from the output of your source. Audio signals connected to the output of your switcher should be properly wired to the input of your destination device.</li> <li>▪ Confirm that any other amplifiers in the signal path have the proper source and/or destination selected. Pay special attention to input amplifiers that may be built into your destination device.</li> <li>▪ Replace the audio crosspoint module with one that is known to be functional.</li> </ul>
Audio level is too low	<ul style="list-style-type: none"> <li>▪ Confirm that the connecting cables are of high quality and properly built. Take special care in noting the wiring configuration of balanced to unbalanced cables (if possible use a matching transformers).</li> <li>▪ Check level controls located on your source input device or output monitor or recorder.</li> <li>▪ Replace the audio crosspoint module with one that is known to be functional.</li> </ul>

## Control

Problem	Remedy
No control of Matrix Switcher from PC software	<ul style="list-style-type: none"> <li>▪ Confirm the correct wiring of the connecting cable. Be sure to use a standard one to one 9 pin serial cable.</li> <li>▪ Confirm that all Dip Switches on the control processor are set properly. See Dip switch settings on page 17.</li> <li>▪ Confirm that the baud rate of your computer COM port is set to the same as that of your Matrix Switcher (9600-Baud factory default). Confirm that the proper COM port is selected in the control software.</li> <li>▪ Use a terminal emulator program to send <b>**!!</b> commands and check for <b>**OK!!</b> response.</li> <li>▪ If you do not receive <b>**OK!!</b>, the problem is with the switcher.</li> </ul>

## Switching Malfunctions

Problem	Remedy
The switcher succeeds in switching a number of sources then fails to switch one.	<p data-bbox="472 384 1117 411">Malfunction in the particular source or cable assembly.</p> <p data-bbox="472 430 558 457">NOTE:</p> <p data-bbox="472 476 1414 533">The most common failure mode in transferring the signal of an audio source is a break in the connecting wire.</p> <ul data-bbox="521 552 1422 732" style="list-style-type: none"> <li data-bbox="521 552 1422 732">▪ Disconnect the source from a channel that is switching successfully and connect the suspect source to it. If the channel continues to switch successfully, then there is something wrong with the Matrix Switcher or the suspect source was not connected properly. If it does not continue to switch successfully, then there is something wrong with the source or cable assembly.</li> </ul>
The Matrix Switcher turns ON but will not switch at all	<ul data-bbox="521 747 1422 835" style="list-style-type: none"> <li data-bbox="521 747 1422 835">▪ Check the LEDs on the serial processor board. If they are not counting, the control module is dead. If the control panel is not lit, check the ribbon cable connection between the panel and the processor control module.</li> </ul>

## Software Upgrades

Sierra Video routers and SCP series control panels can be upgraded via the 9 pin serial port. Upgrades are accomplished using the TyLinX Pro Software program. For details on software upgrades refer to the TyLinX Pro manual.

# Specifications

## Audio Specifications

Audio	
Maximum source output level	+24 dBm Balanced 18 dBu Un-balanced >20K Ohm Load
Input impedance	Differential Mode: 20K ohm Single Ended Mode: 10K ohm
Output Impedance	Differential Mode: <100 ohm Single Ended Mode: <50 ohm
Voltage gain	Unity +/- 0.5dB (driving High-Z balanced output).
Frequency response	20 to 20KHz +/- 0.5 dB (typical -3 dB @ 120KHz) (unity gain)
S/N Ratio (20 to 20 KHz)	< -90 dB, output +24dBu, balanced
Crosstalk (all inputs hostile)	@ 1kHz: <-80 dB @20 kHz: <-70 dB
IM & THD (20 to 20 KHz)	THD: < 0.025% @ +4 dBu (unity gain) IM: < 0.025 SMPTE-DIN @ +4 dBu (unity gain) < 0.01% CCIF @ +16 dBu
Maximum Signal Amplitude	Differential Mode: +24 dBu Single Ended Mode: +18 dBu
Audio Connectors	5-wire removable captive screw terminal

## Video Specifications

<b>Video</b>	
Input impedance	75 ohm nominal (510 ohm option pulse inputs)
Input connector type	BNC
Video input level	300mV to 2.5V P-P
Pulse input level	.2 – 5V P-P
Video bandwidth (-3dB)	>450MHz @ +2/-3dB
Pulse rate	Up to 200KHz
Crosstalk (Video)	-80 dB @ 1MHz -47 dB at 100MHz
1 input to many outputs	All electrical specifications remain the same
Video gain.	Unity
Video output level	200mV to 2.5V P-P
Pulse output level.	2V P-P Nom. into 75 ohms
Output impedance	75 ohm nominal
Output connector type	BNC
Operating temperature range	0 to 40 °C
Storage temperature range	-10 to +60 °C
Performance temperature range	10 to 30 °C
Humidity	0 – 100% RH (non-condensing)
Rise Time	1-10 nanosecond
Maximum Video Resolution	2048 x 1536 @ 75Hz Refresh Rate

# Warranty

## A. General

Buyer assumes all responsibility for ascertaining the suitability of Sierra Video (hereinafter "SVS") products for Buyer's intended use. No product sold by SVS is designed or manufactured for use in any manner or under any conditions other than those described in SVS's instruction manuals and other printed material for each particular product. If any product is used or applied in a manner or under conditions not specifically authorized by such written materials or if any product is used by unqualified or improperly trained personnel, Buyer agrees that SVS shall have no liability of any kind arising from such use, and Buyer agrees to indemnify and hold SVS harmless from any claims of third parties arising from such use, and Buyer shall provide SVS with counsel of SVS's choice to defend against such claims.

## B. Limited Warranty

1. This limited warranty applies only to the original purchaser and is non-transferable. This limited warranty begins on the date of purchase and will be in effect for seven (7) years for new equipment and for three (3) years for "Factory Refurbished" equipment. Power Supplies and fans are warranted for three (3) years from the date of purchase for new equipment and two (2) years for "Factory Refurbished" units, from the date of purchase.

Buyer must obtain a Return Material Authorization ("RMA") number from SVS prior to returning a product for repair. If, in SVS' sole discretion, the product is found to be defective during the term of this warranty, SVS will at its option: (a) provide free replacement parts, and/or (b) repair the unit at an SVS facility. During the warranty period, SVS will make every reasonable effort to support critical emergencies by supplying no-cost loan equipment while the defective unit is being repaired. SVS will provide replacement parts and/or factory service at no charge. Buyer bears the cost of shipping products returned to SVS under this warranty. SVS will bear the cost of shipping repaired products or replacement parts to the Buyer.

This limited warranty shall not apply to any of SVS's goods which have been altered or which have been subjected to misuse, mishandling, improper storage or negligence. The aforementioned provisions do not extend the original warranty period of any goods which have been replaced by SVS. This limited warranty shall not apply to any goods not of SVS's manufacture, Buyer to be entitled only to the warranty set forth in the original manufacturer's limited warranty.

THIS LIMITED WARRANTY IS EXPRESSED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE, AND ALL OTHER OBLIGATIONS OR LIABILITIES ON SVS'S PART.

SVS neither assumes nor authorizes any other person to assume for SVS any other liabilities in connection with the sale of products of its own manufacture.

2. SVS's liability hereunder on any claim of any kind, except as set forth herein for any loss, injury to person or property or damage, shall in no case exceed the price allocable to the goods which give rise to such claim.

3. In no event shall SVS be liable for any damages or injuries to person or property if any goods do not meet the above limited warranty, including, without limitation, incidental expenses or consequential or special damages, except as set forth in such limited warranty. The foregoing states the exclusive remedy of Buyer and the exclusive liability of SVS for any breach of the foregoing limited warranty.

## C. Cancellation

Except as provided in paragraph B immediately above, all sales are final, and Buyer may cancel this order or return products only upon written consent of SVS.

## D. General

In the event of a breach of any of the terms hereof, the non-breaching party shall be entitled to recover all of its costs, fees, and expenses, including, without limitation, reasonable attorney's fees, from the breach party incurred as a result of such breach, regardless of whether or not a suit is actually filed to enforce the terms hereof.

The provision hereof shall be governed by the laws of the State of California (excluding its choice of law provisions).

The headings are for convenience only and do not limit or amplify the terms and provisions hereof.

In case any one or more of the provisions set forth herein shall be held to be invalid, illegal, or unenforceable in any respect, the validity, legality, and enforceability of the remaining provisions contained herein shall not in any way be affected or impaired thereby.

No waiver, alteration, or modification of any of the provisions hereof shall be binding unless in writing and signed by an authorized Officer of SVS.

---

**NOTE:**

*All products returned to SVS for service must have prior approval. Return authorization requests may be obtained from your SVS dealer.*